











| | | |
|---|------------------|---|
|  | symbian s60 v3.0 | N71、N73、N75、 N76、N77、N78、N80、N81、N82、N91、N92 、N93、N93i、N95、 N96、N97、E50、E65、E61 、E61i、E62、E60、E70、E71、E66、E90、5 700、6110、6120、6220、6121、6122、6290 、6110Navigator 、N80、3250、5500、5700、5320、5800、621 0N、 6220、6650F、E63E66、E71、N79、N85、N9 6、E61i |
|  | Mobile Pocket PC | MPX220、MPX、Q8、Q7、V1000 |
|  | symbian s60 v3.0 | I400、i408、i450、i458、i500、i550、i520、i 560、i570、i558、G810、G818、I8510 |
|  | Mobile Pocket PC | 686、696、696i、699、700、818、828+、838、9 00、830 MUSE、 GHT9000、P800 、M700、C858、9100、9110、D600、U1000、 P4550、P3450、D802、E806c 、S1、P5500、E616、P860、D805、Touch DUAL、 Diamond P3470 P660 S600 S900 X7510 C730 E616 E806c P3600i P4550 P860 U1000 699 818 Pro 818 P9000 700 696i E806c S700 S730 C858 900 |
|  | Mobile Pocket PC | ET-280、ET-560、ET-580、ET-960、ET- 980、XP618 ET860 ET800 ET600 |
|  | Mobile Pocket PC | N810、N800、N8、E870、E860、E800、E850 N7 |
|  | Mobile Pocket PC | P51、P50 |
|  | Mobile Pocket PC | O2 Cocoon O2 Flame O2 Helen O2 XDA Atom O2 XDA Graphite O2 XDA Zinc O2 Xda Argon O2 Cosmo O2 Xda Atom O2 Xda Orbit O2 Xda Stealth |
|  | Mobile Pocket PC | 惠普 iPAQ rw6818 HW6515 |
|  | Mobile Pocket PC | M930w P320 P560 兰博基尼ZX1 P526 P735 P535 P750 P550 |

| | | |
|----------|-----------------------------|--|
| GIGABYTE | Mobile Pocket PC | MS800 MS804 MS808 MS820 g-Smart I i128 i300c i350 t600 i300 |
|----------|-----------------------------|--|