

4CTM6G MANUAL

100FPS H.264 SMOOTH INTERNET DVR MACHINE

Please read this manual carefully before operating

CHAPTER I. ABOUT THE PRODUCT..... 5

1.1 INTRODUCTION..... 5

1.2 FUNCTIONS AND FEATURES 6

CHAPTER II. INSTALLATION INSTRUCTION..... 9

2.1 CHECK THE DEVICE 9

2.2 INSTALL 9

CHAPTER III. OPERATION INSTRUCTION..... 12

3.1 FRONT PANEL.....12

3.2 REMOTE CONTROLLER 15

3.3 MOUSE OPERATION 16

3.4 MENU OPERATION 16

3.5 INPUT METHOD..... 18

3.6 SCREEN DISPLAY IN RUNNING STATE 18

CHAPTER IV. BASIC OPERATION..... 20

4.1 TURN ON 20

4.2 DATE/TIME SETTING..... 20

4.3 RECORDING SETTING 21

4.4 SECRET RECORDING SETTING..... 22

4.5 PLAY (PLAYBACK)..... 22

4.6 SINGLE FRAME PLAYING 23

4.7 DUAL WORKFLOW OPERATION 23

4.8 SEARCH AND PLAY 23

4.9 TURN OFF..... 24


CHAPTER V. MENU AND PARAMETER SETTINGS 25

5.1 LOCAL DISPLAY 25

 5.1.1 Password operation instruction..... 26

5.2	IMAGE SETTING.....	26
5.2.1	Area mask setting.....	27
5.2.2	Image mask setting.....	29
5.2.3	Alarm processing setting.....	30
5.2.4	Video loss setting.....	31
5.2.5	Motion detection setting.....	32
5.3	VIDEO RECORDING SETTING.....	35
5.4	NETWORK SETTING.....	37
5.5	ALARM SETTING.....	39
5.6	ABNORMITY PROCESSING (NOT AVAILABLE AT PRESENT).....	40
5.7	SERIAL PORT DEVICE.....	40
5.8	PREVIEW SETTING (NOT AVAILABLE AT PRESENT).....	41
5.9	USER MANAGEMENT.....	42
5.9.1	Authority setting.....	42
5.10	PLAY BACKUP.....	43
5.10.1	Playback by time search.....	43
5.10.2	Backup.....	44
5.11	TOOLS.....	46
5.12	FACTORY SETTINGS.....	46
5.13	UPGRADE.....	46
5.14	HDD MANAGEMENT.....	47
5.14.1	Recover data.....	48
5.14.2	HDD check (not available at present).....	48
5.15	LOG MANAGEMENT.....	48
5.16	SYSTEM INFORMATION.....	48
CHAPTER VI. NETDVR OPERATION INSTRUCTION.....		49
6.1	FEATURES.....	49
6.2	CONFIGURATION.....	51
6.3	START SOFTWARE.....	51
6.4	MAIN MENU.....	52

6.4.1	Channel management.....	53
6.4.2	User management.....	55
6.4.3	Proxy management.....	56
6.4.4	Channel number.....	57
6.4.5	Language.....	58
6.4.6	Change skin.....	58
6.4.7	Local settings.....	58
6.4.8	Exit.....	60
7.0	SPECIFIC OPERATION OF NETDVR.....	59
7.1	RIGHT-CLICK MENU.....	61
7.2	VIEW.....	61
7.3	PATROL.....	62
7.4	TAKE PICTURE.....	63
7.5	RECORD VIDEO.....	63
7.6	MONITOR AUDIO.....	63
7.7	ADJUST IMAGE QUALITY AND FRAME RATE.....	64
7.8	EXIT.....	64
8.0	KEYS DEFINITION.....	65
CHAPTER VII. PAN/TILT CONTROL.....		68
9.1	PAN/TILT CONTROL.....	68
9.2	NETWORK PAN/TILT CONTROL.....	68
CHAPTER VIII. TROUBLESHOOTING.....		70
APPENDIX 1 SPECIFICATIONS AND PARAMETERS.....		74
APPENDIX 2 PACKING LIST.....		76


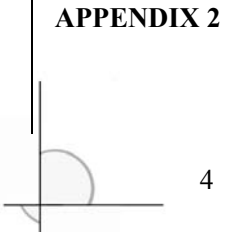


Chapter I. About the Product

1.1 Introduction

Digital Video Recorder (DVR) is a digital monitoring product specially designed for security and surveillance. With professional embedded operating system PSOS, it is independent of the PC platform, avoid computer virus attack and eliminates halt permanently, which enables the system to run faster and more stably. DVR is also integrated with the feature of digital A/V server and can be connected to Internet to build powerful safety monitoring network. It can be widely applied in different industries, e.g. marketplace, office building, factory, warehouse, community, etc, ensuring a good security guarantee for them.

Connection diagram:

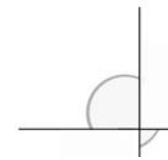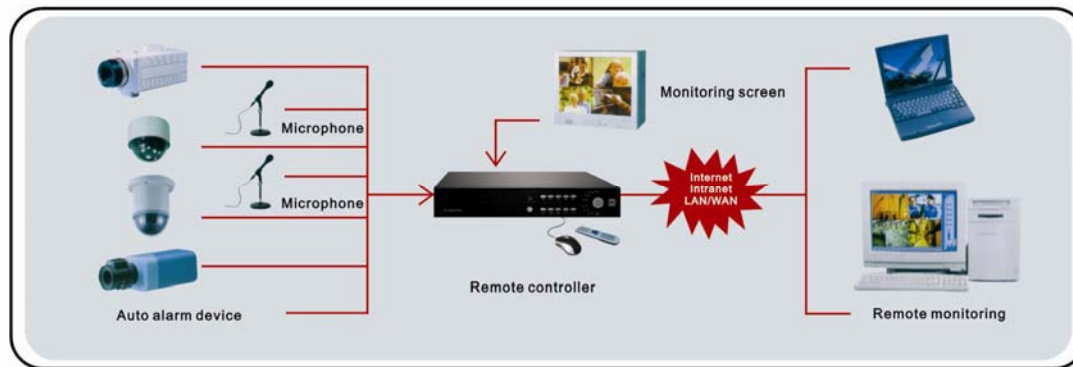

1.2 Functions and features

System mode

- With professional operating system PSOS, DVR is independent of the PC platform, avoid computer virus attack and eliminates halt permanently, so it is more stable and free of delay;
- Independent modular design makes the system more stable;

Compression method

- Compress/decompress in H264 algorithm and higher definition is ensured;
- The audio is compressed in G.729 algorithm, which will bring better audio effect;
- Synchronized A/V compression;
- CBR and VBR compression;

Display

- 4-channel A/V input, BNC output;
- 25 F/S (PAL) or 30 F/S (NTSC) real-time compression in each channel without delay;
- The contrast, brightness and saturation of field on live and playback image are adjustable;
- Customize the name of every image;

Video recording

- 4-channel synchronized A/V recording;
- High definition image (CIF); CBR/VBR settings;
- Synchronized A/V recording; the parameters of video recording of each channel can be set separately; frame rate is adjustable (0.1F/S – 25 F/S);
- Manual, schedule, alarm and motion detection recording;
- Five levels are available for image quality and bit rate may be customized;

Motion detection function

- 48 motion detection areas can be set in each image;

- Level 1-7 sensitivity can be set in each image;

Storage

- Support up to 2 IDE hard disks ;
- No limitation on capacity and rotation speed of hard disk;
- Manual overwriting, automatic overwriting and no overwriting are optional;
- Customize auto alarm of left capacity, i.e. alarm automatically when the left space of hard disk is less than the value you have set;
- The system is integrated with sleep function to reduce heat radiation of the recorder and extend the service life of hard disk;

Search

- Search by date/time, list or exact search;
- Common/alarm video recording searching;
- Log function;

Playback

- Synchronized playback of single channel A/V;
- Play: Fast forward, fast rewind, pause, single frame, previous track, next track, track head, track end, mute;
- Fast forward: 1/2×, 2×, 4×, 8×, 16×, 32×;
- Fast rewind: 1×, 2×, 4×, 8×, 16×, 32×;


Version

- Device type, version number, version date;
- Capacity, video recording information (common/alarm), recording time;
- Working disk, cover mode and times;

Card number appending (optional)

- According to the interface protocol provided by user, intercept the card number through RS232 or network port and append the information of card holder to corresponding image;

PTZ control

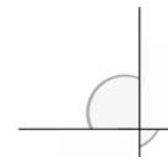

- Support multi-protocol decoder with RS485 bus;

Centralized control

- Control with keyboard through RS485 interface and one keyboard may control several devices separately according to ID;

Alarm function

- 4 alarm inputs/1 alarm outputs;
- Customize time of alarm output;
- Customize alarm input type NC/NO;
- Clear alarm manually or by remote control/network;
- Open/Close buzzer in menu;
- Camera blank or video loss alarm;
- Support pre-alarm recording

Network function

- Support 10/100MB self-adaptive network;
- Download backup with network control software;
- Control PTZ/lens, speed dome camera with network control software;
- Support WEB browsing;

Multiple Viewers


- Support multiple viewers simultaneously by IE browsing

Safety protection

- 128-byte data encryption;
- Dual password protection: administrator and operator;
- Power switch and panel lock; the front panel will be locked automatically within a certain period;

Backup

- Backup in network or another PC;
- Backup with USB, DVDRW or USB HDD;

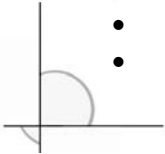

Chapter II. Installation Instruction

2.1 Check the device

Before install the digital video recorder, please check whether the appearance of the device is damaged and whether the accessories are complete. Then, open the case, remove the protective film and begin to install the device.

Prepare the devices (camera, power supply and monitor, etc) which will be connected to the digital video recorder and connect them.


2.2 Install

Important:

- Select appropriate installation position to provide good ventilation and prevent overheating of the device.
- Do not install the device near heat sources like radiator and ventiduct, or places with direct sunshine irradiation, too much dust, or mechanical vibration or impact.
- This digital video recorder isn't equipped with hard disk. You may use the device without hard disk but you can't record the video. High speed hard disk of 7200 rpm or higher is recommended.


Install hard disk: get a cross screwdriver first.

- Step 1: Open the case.
- Step 2: Remove hard disk holder.
- Step 3: Put the hard disk into the holder and fix it with screws on both left and right.
- Step 4: Put the holder back to the device and fix it with screws.
- Step 5: Connect ATA hard disk data cable. To connect two hard disks with one data cable, you need to set the master drive and slave drive. The data cable has three joints, which will be connected to the pin sockets on motherboard, master drive and slave drive respectively. Level the data cable joints and the pins of sockets when connect.
- Step 6: Connect the power cord of hard disk.
- Step 7: Put on the cover of the case and fix it with screws.

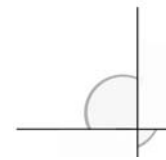

When hard disk is installed, connect other parts to the interfaces on rear panel.

Rear panel

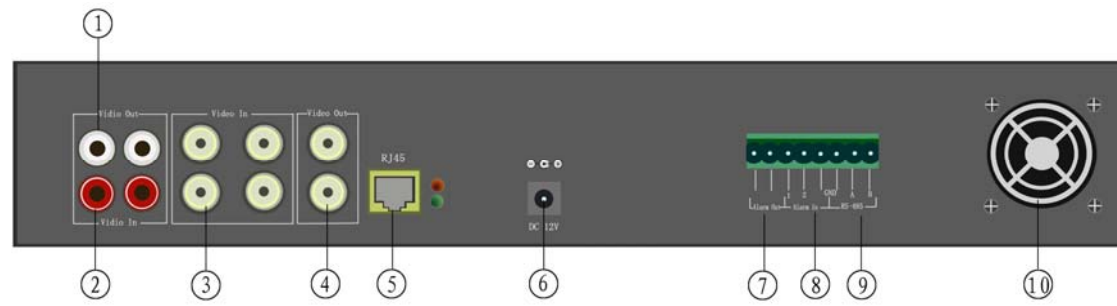

1. Audio input

Connect to (analog) Audio input device.

2. Audio output

Connect to (analog) audio output device.

3. Video input

Connect to video input device.

4. Video output

Connect to monitor and output video signals.

5. UTP network port

Connect to Ethernet devices, e.g. Ethernet switch, Ethernet hub, etc.

6. Power supply


Connect to DC12V/3A power supply.

7~9. Connection terminal of alarm input/output signal and RS485 signal

Connect to peripheral equipment like alarm, decoder, pan/tilt, etc.

10. Fan

It is used to keep ventilation in side the case. It can be blocked by any articles.

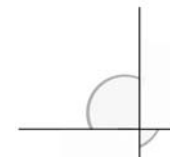



Chapter III. Operation Instruction

3.1 Front panel



No	Name	Description
1	Power Switch	Control power supply to the device. The light of power indicator will be on after turn on the power. It will be off after turn off the power.
2	Number Key	Input number 1 ~ 10
3	State Indicator	Indicate the work state of the device. The correlative light will be on when on correlative work state.
4	Menu Key and Direction Key	Press [Menu] key to enter operation. Then press up [↑] down [↓] left [←] right [→] to move the cursor.
5	USB Interface	Connect the USB and CDRW to update the system and backup. Or operate the USB mouse

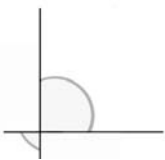


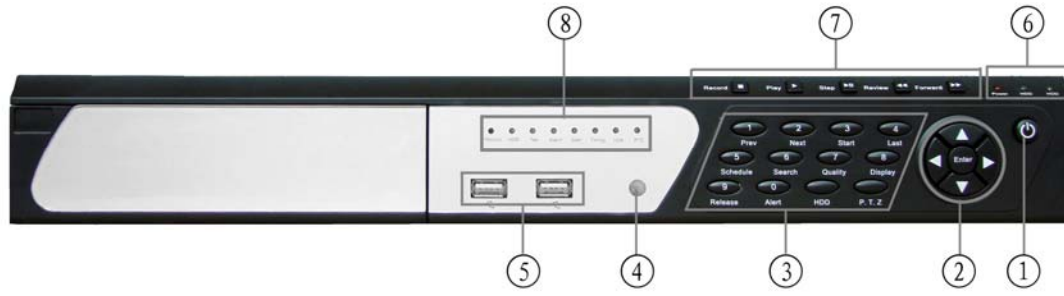

No	Name	Description
1	Power Switch	Control power supply to the device. The light of power indicator will be on after turn on the power. It will be off after turn off the power.
2	Menu Key and Direction Key	Press [Menu] key to enter operation. Then press up [↑] down [↓] left [←] right [→] to move the cursor.
3	Number Key and Function Key	Input number 1 ~ 10 and operate the functions
4	Remote Receiver	Receive the signal from remote control
5	USB Interface	Connect the USB and CDRW to update the system and backup. Or operate the USB mouse
6	Power light and HDD light	Indicate the work state of power and Hard Disk
7	Basic Function Keys	Operate the basic functions.
8	State Indicator	Indicate the work state of the device. The correlative light will be on when on correlative work state.



3.2 Remote controller

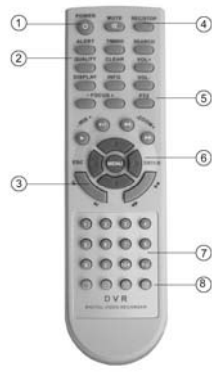

S/N	Name	Remark
1	Power	Same as [Power] key on front panel; turn on/off the power
2	Advance	Same as Alert, Cancel, Search, PTZ control, Exit and Information on front panel
3	Playing	Same as Play, FF and FR on front panel
4	Record	Same as Record on front panel; start/stop video recording
5	PTZ control	Control pan/tilt
6	Main menu	Same as Direction and Menu keys on front panel
7	Numerical keys	Same as numerical keys on front panel
8	Channel switch	Press to display images in different number of channels

3.3 Mouse operation

Connect the mouse to the USB interface in front panel. Left click to confirm selection and right click to select menu. Right

click menu is shown as below:

S/N	Name	Remark
1	Set parameters of recorder	Same as Menu key
2	Recording data	Same as Search key
3	System information	Same as Information key on front panel
4	Alert (disalert)	Same as Alert key on front panel
5	Timing (Cancel)	Enable/disable timing
6	Cancel alarm	Same as Cancel key on front panel
7	PTZ control	Same as PTZ control key on front panel
8	Playback	Same as Play key on front panel
9	Record (Stop)	Same as Record key on front panel


3.4 Menu operation

To enter “System settings” menu, press [Menu] key on front panel to enter directly if password protection is disabled. If password protection is enabled, “Input PSW” window will popup. For example:


Input PSW



- **Note:** Password protection is divided into two levels: administrator (senior user) and operator (common user). (See Chapter 5.9.1: Authority setting on P.29.)
- ◆ **Prompt:** Default password of administrator is 88888888; default password of operator is 66666666.
If password protection is enabled, press [Menu] key and enter valid administrator password in the dialogue box "Input PSW", then, "System settings" menu will popup.
Enter operator password and the operator interface will popup. The icons of the functions that operator has authority is in white. If the operator doesn't have the authority, the icons will be in gray.
If the password protection is disabled, you can press [Menu] key to enter "System settings" menu directly.

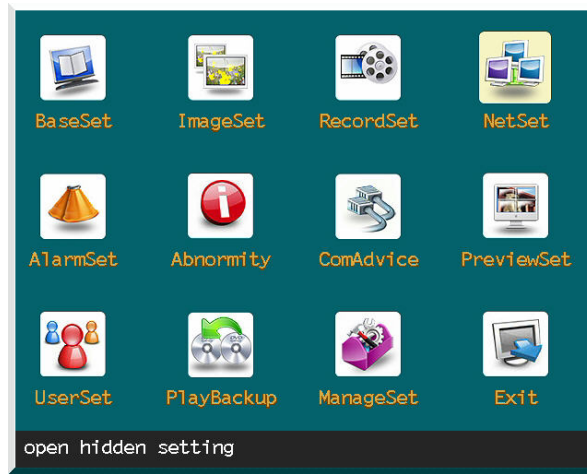

In System settings menu, press [↑], [↓], [←], [→] key to move cursor and press [Menu] key to confirm selection. Press [↑], [↓], [←], [→] key to select items in main menu and press [Menu] key to enter the submenu and set the parameters. In the submenu, the operation will be canceled if you press "Cancel" button. Press "OK" and the setting will be saved. Return to main menu and move cursor to "Exit", then, press [Menu] key and the following message box will popup:

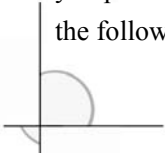




To save the setting, click “Yes”. Click “No” to exit without saving. To continue the setting, click “Back”.

 3.5 Input method




In menu operation interface, enter text edit box (e.g. “Name” box in “Image setting”) and input method will be displayed in status bar at the bottom of the screen, as shown below:




Press [Menu] key on front panel to switch input method. For example, to input numbers, switch the input method to “123” and then press 0-9. To change input method, press [Menu] key. Available input methods include: capitalized letter, small letter, number and location (see “Location input method” in appendix). To input letters, press numerical keys 1-9. Press a key consecutively to switch letters. After input the letter, wait for 2 seconds to input next letter.

3.6 Screen display in running state

Press [Display] key on front panel consecutively and different symbols will be displayed on the screen.

-  **Video recording symbol:** The blue round icon indicates manual recording state.
-  **Video recording symbol:** The yellow round icon indicates timing recording state.
-  **Video recording symbol:** The red round icon indicates alarm recording state.

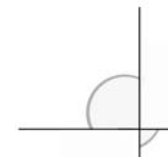

Digital Video Recorder

- ▶ **Playing symbol:** Indicates the recording is being played.
- ▶▶ **FF symbol:** Indicates fast forward.
- ◀◀ **FR symbol:** Indicates fast rewind.
- ▶|| **Single frame symbol:** Indicates pause in single frame playing state.


 
⌚ **Timing symbol:** Indicates the video recorder is in timing state.

⏲ **Alert symbol:** Indicates the video recorder is in alerted state. If alarm signals generated, the recorder will record and output the alarm automatically. When alarm occurs, the symbol will turn into solid from hollow.

:/** **Time display:** Display the playing time or recording time.

▢▢▢ **Image quality symbol:** One yellow strip and two white strips indicate low quality; three green strips indicate medium quality; two green strips and one white strip indicate high quality; one green strip and two white strips indicate highest quality; two red strips and one white strip indicate custom. (The quality of Custom is highest by default)

Hard disk status:

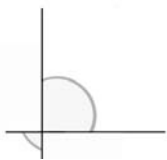

Basic Operation

4.1 Turn on

Check whether the current and voltage of power supply accord with the digital video recorder before turning it on. Check whether video recording device is connected and whether the connection is proper. Check whether monitor is connected to VOUT port t on rear panel. Connect properly and then turn on the recorder. Press Power button on front panel to turn on the recorder.

■ **Note:** If “**No hard disk. Continue?**” is displayed when you turn on the recorder; it indicates that the hard disk hasn’t been installed. Please check whether the hard disk is connected properly, or whether is damaged. If the recording scene isn’t displayed on the screen, please check the connection of video input device.

■ **Note:** If the hard disk has been used and “**Hard disk hasn’t been formatted. Format now?**” is displayed; click “**Yes**” to format the hard disk and then you can record video normally. Click “**No**”, the hard disk won’t be formatted and you can’t record video normally.

4.2 Date/time setting


You need to set date/time before record video.

◆ **Prompt:** Stop the video recording when set date/time. If it is in recording state, the status bar will indicate the state and the settings won’t take effect.

Step 1 Press [Menu] key to enter system menu. If password protection is enabled, the “Input PSW” window will popup when you press [Menu] key and you need to enter valid password. (Default password: 88888888) If password protection is disabled, you can press [Menu] key to enter menu setting interface directly.

Step 2 Press [↑], [↓], [←], and [→] to move cursor. Select “**BaseSet** ” to enter the menu and then select “**Date/time setting**”, as shown below.



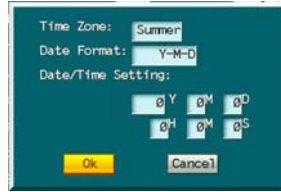

Time Zone Move cursor to “Time Zone” and press [Menu] key to select “Summer” or “Winter”. Press [←]/[→] to select an option and press [Menu] to confirm.

Date Format Move cursor to “Time Zone” and press [Menu] key to select “Y-M-D” or “M-D-Y”. Press [←]/[→] to select an option and press [Menu] to confirm.

Date/time Setting Move cursor to the item and press numerical keys on front panel to enter the values.

Step 3 Select “OK” and press [Menu] to save and exit.

4.3 Recording setting

Step 1 Press [Menu] key to enter system menu. Press [↑], [↓], [←], and [→] to move cursor to “RecordSet”.



Step 2 Customize quality in “Quality” box. Move cursor to Quality and press [Menu] key to enter. Available options include: Highest, High, Medium, Low and Customized. (Higher quality will occupy more space.) Press [←]/[→] to move cursor to desired option and press “OK”

to save and exit. (Do not change this setting if not necessary)

Step 3 The “**Audio**” option in audio options should correspond to video of each channel. Move cursor to Audio and press [Menu] key to enter. If “Image 1” is selected in channels, you need to select option “1” or “2” in audio options and then the audio and video will be recorded synchronously. Select “No” and the audio won't be recorded.

Step 4 After setting, click “OK” to save and exit, or click “Cancel” to exit without saving.

Step 5 When system setting is finished, press [●] button on front panel and a dialogue will popup for you to select channel.

Click “Select all” to select all options. Click “Deselect all” to deselect all options. After selection, click “OK” to save and exit. Only the video of selected channel will be recorded. The recording state will be displayed in lower left corner. The green icon “●” indicates manual recording. To stop recording, press [●] button on front panel.

In recording state, click numerical key (1-16) to switch to the channel and preview in single image.

- **Note:** Video recording can't be executed in the system setting process.

4.4 Secret recording setting

“Secret recording” may be enabled in the process of common video recording. To enable secret recording, click [Menu] – “Video recording setting” – “Secret recording”. The scene won't be displayed in secret recording process. You also can't play the recording during this process.

4.5 Play (playback)

In recording state, press [▶] key to play the recording directly. In playing state, the “▶” icon will be displayed on VFD and monitor. Press [▶] key again to stop playing. The recording is played in single image; press numerical key 1-16 to switch channel. (Key 1-16 corresponds to image 1-16.)

- **Note:** The last recording, no matter it is common recording or alarm recording, will be played automatically.


You can perform the following operations when play recording.

Press ◀ button to play fast reversely.

Press ▶▶ button to play fast forwardly.

Press ▶| button to play next track.

Press |◀ button to play previous track.

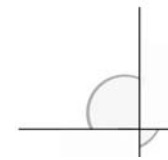

Press Play button to resume normal playing and press it again to stop playback.

4.6 Single frame playing

In the playing process, press [▶ ||] button on front panel to pause the recording. Press [▶ ||] button again and the playing will be paused and enter single frame playing state. The recording will be played by single frame when you press the button consecutively. Press [▶] button again to resume normal playing.

4.7 Dual workflow operation

Dual workflow operation indicates that the playing and recording will be performed at the same time. Recording and playing are two independent workflows.


In monitoring state, you can perform either recording or playing;

In dual workflow operation process, the recording is always in background and the playing is always in foreground. If recording is performed in playing process, no response will be displayed on the screen, but the recording indicator on front panel will be lit. If the playing is stopped, the recording in background will appear on the screen. If the playing is performed in recording process, the image being played will be displayed on the screen and the recording image will go to background.

◆ **Prompt:** If it is not necessary, avoid dual workflow operation. It will shorten the service life of hard disk if searching and playing are performed continually for long time.

4.8 Search and play

Step 1: Press [Search] button on front panel to enter searching menu setting. The following image will be displayed:

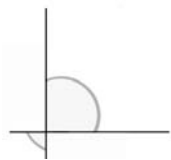

Rec Date : 2008-02-18					
NO	Type	Time	Length	Size	chan
0000	N	08:31:28	00:03:28	0.03	---
0001	A	08:31:28	00:03:28	0.03	---
0002	N	08:31:28	00:03:28	0.03	---
0003	A	08:31:28	00:03:28	0.03	---
0004	A	08:31:28	00:03:28	0.03	---
0005	A	08:31:28	00:03:28	0.03	---
0006	A	08:31:28	00:03:28	0.03	---
0007	A	08:31:28	00:03:28	0.03	---

Sec. cpt: chan.no 0 Play Backup

Find TimeBackup Back

Menu selected L/R page up/down u/n move cursor

Step 2: Select file type of recording to search. Common recording and alarm recording are available. Click [↑]/[↓] key to select recording. Click [←]/[→] key to select page. Press [Menu] key to select the recording (or multiple options) to play. The grounding of the item where cursor locates is yellow and the selected item is green.

Step 3: Click [↓] key to move cursor to “Play” button to play the selected recording. Click “Backup” button to backup the recording.

- **Note:** To backup, stop the video recording first. The playing and backup will take effect only when recording is selected (with green grounding). The channel selection dialogue box will popup; select a channel and the recording data of this channel will be backup. The channels that haven't been selected won't be backup. External device is necessary for backup.

4.9 Turn off

- Press the Power key on front panel to turn off the recorder.

Note: If the recorder is in alarm or alert state, please press Alarm key or Alert key to restore common recording first, and then press [●] to stop recording or press [▶] to stop playing.

The recorder shouldn't be turned off in backup process; otherwise the backup recording will be lost.

- ◆ **Prompt:** Cut off the power supply of recorder first and then turn off the peripheral devices. If you won't use the recorder for a long time, remove the power cord from outlet.



Chapter IV. Menu and Parameter Settings

5.1 Local display



Output system PAL and NTSC are available. The system should be same to that of the output device. It is PAL in Mainland China.

Language Select menu language. Simplified Chinese, traditional Chinese and English are available.

Brightness Adjust the brightness.

Transparency Adjust the transparency of menu.

Device NO. Assign number to every recorder for the convenience of operation. If the keyboard is connected to multiple recorders, assign number to every recorder to make it convenient to identify and operate the recorders. Press numerical keys to customize device NO.

Password operation Press [Menu] key to select. If password protection is enabled, you can enter the password and then customize the menu. If password protection is disabled, press Menu key to enter menu setting interface directly.

Panel lock Lock front panel. To lock the panel, press [Menu] key to select the tag in options. (The maximum waiting time is 99 minutes before panel is locked.) You can't operate the panel if it is locked. "Wait" indicates the time before panel is locked. The panel will wait for this period of time before it is locked. Press numerical keys to enter time.


Activate log Activate log. To activate log, press [Menu] key to select the tag in options.

■ **Note: There is no log if it is deactivated.**

5.1.1 Password operation instruction

Two modes are available to operate password: if password is activated, you need to enter valid password to perform operations like enter menu, cancel alerting and timing. If password is deactivated, you needn't to enter password to perform operations.

5.2 Image setting

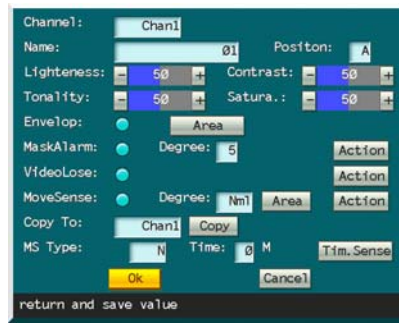


Select image Select video recording image. You can select up to 16 images or select single image to operate.

Name Give name to the recording image for the convenience of operation and viewing. You can name every image here. Press [Menu] key to switch input method if you need to input characters or numbers. Available input methods are: number, capitalized letter, small letter and location code.

Position Set the position of the image name displayed on the screen. Available options are: A (bottom center), B (centering), C (lower left) and D (lower right).

Brightness Customize the brightness.

Contrast Customize the contrast.

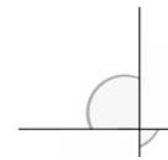

Tone Customize the tone.

Saturation Customize the saturation.

Privacy masking Shield the sensitive or private area in the monitoring image, e.g. the keypad in ATM monitoring.

Area Set the position and size of shielded area.

Mask alarm Customize mask alarm. If the lens is masked, it will record and output the alarm.

Video loss Customize video loss. Activate “Video loss process” and the loss of video signals caused by video cable or camera fault will be detected in time.

Motion detection Detect the moving object in monitoring state. Analyze the video image to check whether the video scene has been changed. If video scene is changed, confirm the processing mode in “Motion detection process”.

Motion detection type Select video recording type. Common and alarm are available. Alarm motion detection will take effect in alerted state only and alarm recording is generated. Common detection recording doesn’t require alerting and produce common recording.


5.2.1 Area mask setting


Step 1: Select image

Move cursor to “Select image” to select the image to set mask. Press [Menu] to confirm.

Step 2: Set mask area

Enter mask setting interface. Press [Menu] key to select “Mask alarm” to activate Area button. Move cursor to “Area” and press [Menu] to enter mask area setting interface, as shown below:

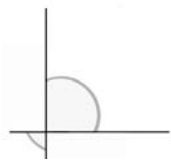

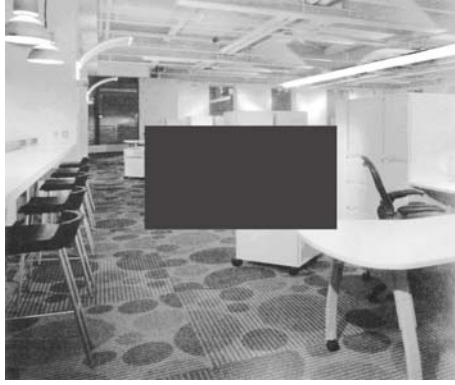

In mask area setting interface, red line is used as the direction line of area selection. Press the same direction to zoom in the area and press the opposite direction to zoom out the area. You can customize the settings. (One image can cover one area only) Press [Menu] to return to "Image setting" interface after setting.

■ **Note:** Only two mask areas are supported at present.

Step 3: Copy channel

You may copy the contents of area mask setting to another channel or all channels. Select a channel in "Copy setting to" and click "Copy" button. Repeat step 1 and 2 if the areas of other channels are different.

Step 4: Save


After the area mask setting of all channels, click "OK" button in "Image setting" menu to save and exit.

5.2.2 Image mask setting

Step 1: Select image

Enter "ImageSet" menu. Move cursor to "Select image" to select the image to set mask alarm. Press [Menu] to confirm.

Step 2: Activate mask alarm

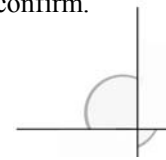

Press [Menu] key to select “Mask alarm” to activate mask alarm.

Step 3: Sensitivity setting

Set “Sensitivity”. Seven options (level 1-7) are available. You can customize the settings.

Step 4: Process mask alarm

Move cursor to “Process”. Press [Menu] key to customize the parameters of processing dialogue box. (See Chapter 5.2.3: Alarm processing setting on page 21.)

Step 5: Copy channel

You may copy the contents of area mask setting to another channel or all channels. Select a channel in “Copy setting to” and click "Copy" button. Repeat step 1 and 4 if the areas of other channels are different.

Step 6: Save


After the image mask setting of all channels, click “OK” button in “Image setting” menu to save and exit.

Step 7: Activate/deactivate alert

Activate Press [Alert] key on front panel to activate mask alarm recording. Alerting symbol will be displayed on the screen. If alarm occurs, the symbol will be displayed on the screen. The recorder will buzz. Press [Clear] on front panel to clear alarm output.

Deactivate Press the [Alert] key on front panel and the dialogue box “Input PSW” will popup if password protection is enabled. (Default password: 88888888) Enter valid password to exit alerting state. Mask alarm recording will be stopped and alerting symbol will disappear.

5.2.3 Alarm processing setting

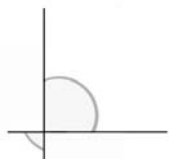



Select triggering image Press [Menu] key to select among the 16 images. The selected image will record when alarm is triggered. Move cursor to select image and press [Menu] to activate channel image.

Buzzer Press [Menu] to activate buzzer. The buzzer will send alert if alarm occurs when it is activated.

Upload alarm Upload the alarm image to remote host. (Available when management host is connected.) The time of image upload depends on the time of alarm upload.

Alarm output Select output channel of alarm.

Recording time before alarm Set the time of recording before alarm is triggered. Press numerical keys to enter time. The images before alarm will be saved as alarm recording according to preset time. If "Recording time before alarm" is "0", the system won't enter pre-alarm state, i.e. the period before alarm won't be recorded.

Recording time after alarm Set the time of recording after alarm is triggered. Press numerical keys to enter time. The alarm recording after alarm is triggered is saved.

Alarm output time Output time of alarm signals. Alarm should be connected to the recorder.

■ **Note:** You also need to set these three items (Recording time before alarm, recording time after alarm, alarm output time) in other options (e.g. video loss processing). Their values are interrelated, e.g. if the "Recording time before alarm" in "Mask alarm" is changed, the "Recording

time before alarm” in “Video loss processing” will also change.

5.2.4 Video loss setting

Step 1: Select image

Enter “ImageSet” menu to select image to perform video loss setting. Move cursor to “Select image” to select the image to perform video loss setting. Press [Menu] to confirm.

Step 2: Activate video loss

Press [Menu] key to select “Video loss” option.

Step 3: Video loss processing

Move cursor to “Process” and press [Menu] key to enter. The interface of video loss processing is same to video mask interface. (See Chapter 5.2.3: Alarm processing setting on page 21.)

Step 4: Copy setting

You may copy the contents of area mask setting to another channel or all channels. Select a channel in “Copy setting to” and click "Copy" button. Repeat step 1 and 3 if the video loss processing modes of other channels are different.

Step 5: Save

After the video loss processing setting of all channels, click “OK” button in “Image setting” menu to save and exit.

Step 6: Activate/deactivate alerting

Activate Press [Alert] key on front panel to activate video loss alarm recording. Alerting symbol will be displayed on the screen. If alarm occurs, the symbol will be displayed on the screen and the recorder will buzz. Press [Clear] on front panel to clear alarm output and press [Alert] key again to exit alerting state.

Deactivate To stop video loss alarm recording, press [Alert] key on panel first. If password protection is enabled, the “Input PSW” dialogue box will popup. (Default password: 88888888) Enter valid password to stop video loss alarm recording. The alerting symbol in the image will also disappear.

5.2.5 Motion detection setting

Step 1: Select image


Enter "ImageSet" interface. Move cursor to "Select image" to select the image to perform motion detection setting. Press [Menu] to confirm.

Step 2: Activate motion detection


Press [Menu] key to select "Motion detection" to activate mask alarm.

Step 3: Set sensitivity


Move cursor to "Sensitivity". Seven options (level 1-7) are available. You can customize the settings. If the sensitivity is low, the motion detection alarm will be activated only when the change of scene is obvious; if the sensitivity is high, the motion detection alarm will be activated when the scene changes slightly.

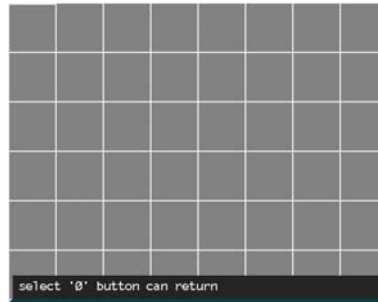Step 4: Set motion detection area

In the video scene of this channel, you need to define which area will be processed if motion detection occurs. The whole image is divided into 48 (6×8) panes. Three colors are available for cursor to set motion detection: yellow indicates moving cursor only; blue indicates setting motion detection area and the panes that blue cursor moves across will turn into red, indicating that these areas are selected; green indicates deleting motion detection area and the panes that green cursor moves across will turn into grey, indicating that these areas are not selected. Press [Menu] key to switch the color of cursor among yellow, blue and green. Press [↑], [↓], [←], and [→] to move cursor to select area. If the color

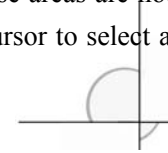

changes at selected areas, motion detection will be triggered. If the color change at areas that are not selected, motion detection won't be triggered. As shown in the figure below: motion detection will be triggered in area A (red) instead of area B (grey). After selection, press "0" to exit.

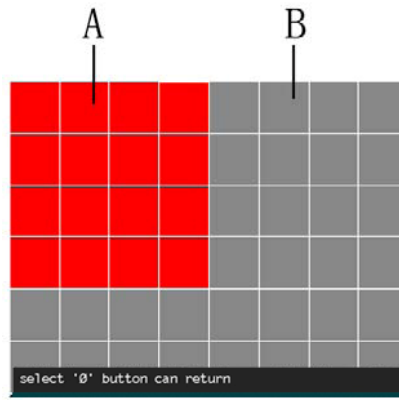


Step 5: Process motion detection alarm

Move cursor to "Process" button of motion detection and press [Menu] to enter "Motion detection processing" interface. The interface of motion detection processing is same to video mask interface. (See Chapter 5.2.3: Alarm processing setting on page 21.)

Step 6: Select type

The recording of motion detection will be saved as alarm/common recording. In common recording process: when the setting of time period takes effect, it will be activated immediately after exit the menu; if alerting is activated, common motion detection will be disabled. In alarm recording process, if buzzer is activated, the device will buzz. The time of alarm recording depends on recording time before and after alarm. Alarm recording will take effected only when alerted.

Step 7: Timing motion detection

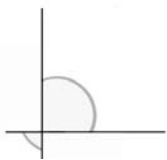

Periods	Beg.Time	EndTime
Mon-Fri	0:0	0:0
Sat-Sun	0:0	0:0
Mon	0:0	0:0
Tues	0:0	0:0
Wed	0:0	0:0
Thur	0:0	0:0
Fri	0:0	0:0
Sat	0:0	0:0

Perform motion detection in preset time period. Enter next step directly if you don't set this option. To set timing motion detection, customize the time in dialogue box of period detection.

Select the time period first and then input the beginning time and end time. Click "OK" to save and exit.

Timing detection only relates to common detection and won't affect the effective time of alarm detection.

- ◆ **Prompt:** Enter valid time. The end time must be later than the beginning time; otherwise the period motion detection won't take effect.

Step 8: Copy setting


You may copy the contents of area mask setting to another channel or all channels. Select a channel in "Copy setting to" and click "Copy" button. Repeat the setting if the video loss processing modes of other channels are different. The type and time of motion detection and contents of timing detection won't be copied. As the effective range of this section is all channels.

Step 9: Save setting

After the setting of motion detection, click "OK" to save and exit, and return to "Image setting" interface. Click "Cancel" to give up the setting.

Step 10: Activate/deactivate alerting

Activate If alarm recording is enabled, you need to press [Alert] button on front panel to activate motion detection recording. Alerting symbol is displayed. If alarm occurs, the recorder will buzz. Press [Clear] on front panel to clear alarm output and press [Alert] button again to exit

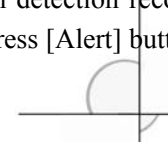

alerting state.

Deactivate To stop motion detection alarm recording, press [Alert] key on panel first and the “Input PSW” dialogue box will popup. (Default password: 88888888) Enter valid password to stop motion detection recording. The alerting symbol in the image will also disappear.

◆ **Prompt:** If motion detection alarm recording is activated, manual recording will be disabled. Alarm motion detection recording will be saved in hard disk as alarm recording. Common motion detection recording will be saved in hard disk as common recording.

5.3 Video recording setting



Select channel Select the image being monitored. Up to 16 images are available.

Image quality Set the quality of images being monitored. Five options are available: Highest, High, Medium, Low and Custom.

◆ **Prompt:** Higher quality image will occupy more space.

Frame rate The number of images that will be recorded in one second. E.g. 25f/s indicates recording 25 images in one second.

Audio Whether audio will be recorded in monitoring state. Channels 1-16 are available.

Secret recording In monitoring state, the video won't be displayed on the monitor but it will be recorded.

Copy setting to Copy the setting of channels. It will be convenient for users to customize image parameters. Select channel and click “Copy” to copy the setting.

Timing recording Record video at specified time.

Space full Select the processing mode when hard disk is full.

Resolution Display the resolution of monitoring image. CIF and HD1 are available.

Image quality Five levels are available for image quality of recording. You can customize the size of these five options here. Different

quality levels cost different hard disk spaces. Press numerical keys on front panel to change. Default values are recommended: 150, 200, 250, and 300.

5.3.1 Timing video recording setting



Step 1: Date/time setting

The recorder is activated in specified time period only.

Date Ten options are available.

Beginning time The time to start recording. The recording will be started at specified time. The format is 24-hour. Press numerical keys on front panel to input time.

End time The time to stop recording. The recording will be stopped at specified time. The format is 24-hour. Press numerical keys on front panel to input time.


Step 2: Select channel

Press [Menu] to enter channel selection dialogue box; move cursor and press [Menu] to activate desired channel. After selection, click "OK" to save and exit.

◆ **Prompt:** Select among the 8 time periods in timing recording interface.

Step 3: Save setting

After setting, click "OK" to save and exit.

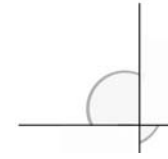


Step 4: Start/stop recording

Start Press [Timing] button on front panel to start timing recording. The timing symbol will be displayed on the monitor and VFD display.

Stop To stop timing recording, press [Timing] button on front panel first. If password protection is enabled, the “Input PSW” dialogue box will popup. (Default password: 88888888) Enter valid password to stop timing recording. The timing symbol in the image will also disappear. If password protection is disabled, press [Timing] button to stop timing recording directly.

◆ **Prompt:** Manual recording will be invalid in timing recording process. Timing recording will be saved in hard disk as alarm recording.

5.4 Network setting

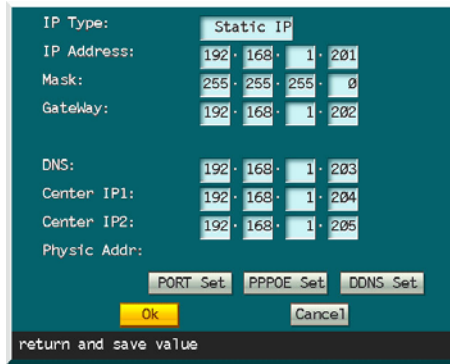

Type Available modes to get IP: Auto and Static. DHCP protocol is used to get IP automatically. The LAN must have DHCP server, otherwise the recorder can't get IP.

IP address This IP address is unique. The recorder can't detect whether there IP address conflict automatically. Please specify valid IP address.

Mask Used to mark net segments of subnet.

Gateway Communicate between different net segments. Gateway address needs to be set.

DNS It is special domain name service software. The device will get a dynamic IP address when it accesses network in PPPoE protocol.

If this IP address is bound to S/N and/or name of device, DNS server will analyze S/N and/or name of device to the IP address. Input the IP address of domain server in “DNS address”.

Host address If host IP and port are configured for the computer that manages the recorder remotely, the digital video recorder will send the signals to remote alarm panel if alarm or abnormal events occur. (Install client software in alarm panel first.)

Port If client software is installed in PC, you need to configure the port before access the recorder with PC. Configure video transmission and information transmission before view the video and information. You need to input the port to access the recorder in IE. WEB port must be same to IE port.


PPPOE With PPPOE, you may connect the PC to remote access device with simple bridging access device. Enter account and password to transfer information through network.

DDNS Dynamic domain name service. Map user's dynamic IP address to a static DNS. When user accesses network, the client will send the dynamic IP of host to the server application in server host. DNS is necessary in “DDNS setting” of this video recorder.

◆ **Prompt:** When you input password, it is visible for you to check and memorize. When the input is finished or cursor is moved away from the password box, it will turn into star symbols.

5.5 Alarm setting

Alarm In: INPUT1
 State: NO Action
 Copy To: INPUT1 Copy
 Alarm Out: OUTPUT1
 State: NO
 Copy To: OUTPUT1 Copy
 Alert Delay: 0 M 0 S
 TimerSet
 Ok Cancel
 return and save value

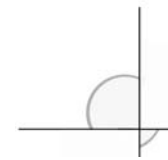

Customize external alarm setting in alarm setting menu. You may customize the linkage of each alarm setting and the validity of each alarm output port.

Alarm in Select alarm input number which will be set.

Alarm input type Select N/O if the alarm input port is connected to normal opened alarm; select N/C if it is connected to normal closed alarm.

Copy setting Copy the setting of this alarm output to another alarm input device.

Process Set the processing when alarm is triggered. (See Chapter 5.2.3: Alarm processing setting on page 21.)

Alarm out Select alarm output number which will be set.


Alarm output type Select N/O if the alarm output port is connected to normal opened alarm; select N/C if it is connected to normal closed alarm.

Copy setting Copy the setting of this alarm output to another alarm input setting.

Alerting delay Set the delay of alerting. Operator may leave the alerted area within this period of time.

5.6 Abnormity processing (not available at present)

5.7 Serial port device

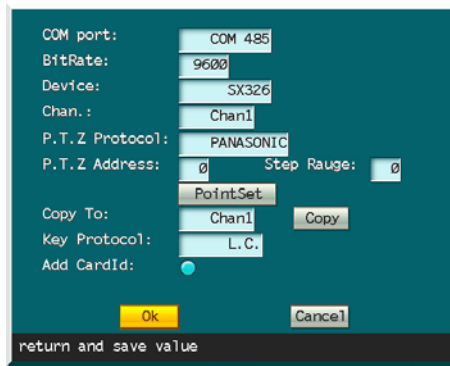

Set the channel number of decoder, including velocity, data bit, stop bit, checkout and stream control, in serial port device menu. The values

of these items must match the connected serial device. The default values are: 8 data bits, 1 stop bit, none checkout bit and hardware stream control.

Serial port RS485 and RS232 are available.

Bit rate Available options are: 19200, 9600, 4800, 2400 and 1200. The selected value must accord with the protocol and parameters of decoder.

Device Central control keyboard (SX326, optional). The device is applicable when the option accords with the peripheral device of the recorder and parameters are correct.

◆ **Prompt:** The three items above are serial port device settings. The items below set the relationship between pan/tilt decoder and channel.

Select channel Select channel.

Decoder protocol Select the protocol type of decoder connected to this channel. Available options are: PANNSONIC, LLW, PELCO-D, PELCO-P, LILIN, NEON, PELCO-D YA, PELCO-D SFD, PELCO-P MK, PELCO-D ZT, PELCO-P ZT and ZHIMIN.

Address ID Enter the address of the decoder connected to selected image and then you can switch the images and select the pan/tilt to operate.

Step Control the rotation of lens. Bigger step indicates faster rotation of lens.

Preset point setting Set and save the position, focus, aperture and zoom of the camera and mark the setting with a number.

Copy Copy the decoder setting of this channel to another channel.


Central control keyboard Available options are: L.C, PINERVE, SAMLINK and ZHIMIN.


◆ **Prompt:** Select central control keyboard protocol if central control keyboard is connected to serial port device.

Add Card ID This function is mainly used in ATM. Activate this function, the account of every business on the ATM will be recorded (optional).

5.8 Preview setting (not available at present)

5.9 User management

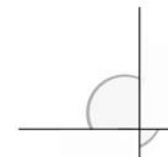

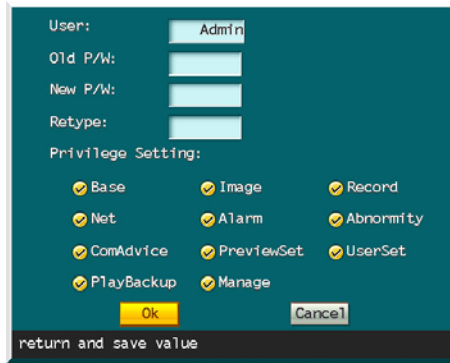

Protect the setting and using of digital video recorder through authority setting. Set the management and operation authority in system settings. The levels of authority are: Administrator, Operator 1, 2 and 3. Administrator is enabled with the highest authority. The administrator may set the authority of operator.

5.9.1 Authority setting

Step 1: Select operator

Press [Menu] button to select user. Move cursor to select user. Press [Menu] button to confirm selection. E.g. select Operator 1.

Step 2: Input password

Press numerical keys to input old password. (Default: 66666666)

Press numerical keys to input new password. The new password may be same to or different from old password. The password is 1-8 digits figure. Operator uses this password to access menus.

Confirm new password Repeat the new password to confirm. The prompt box “PSW checkout error” indicates that you didn’t input same password.


Authority setting Only selected authority may be set. Press [Menu] button to activate selected option.


Step 3: Save setting

Move cursor to select “OK” to save and exit.

- **Note:** If you access the menu with administrator, the “Input PSW” dialogue box will popup when you press [Menu] button. Input the administrator password and then set the menus. (Default password: 88888888)
 - If you access the menu with operator, the “Input PSW” dialogue box will popup when you press [Menu] button. Input the password preset by administrator and then set the menus. (**Prompt:** Operator password must be different from administrator password.) In menus, the authorities appointed by administrator will display normal color and operator may customize. The authorities haven’t appointed by administrator will be in grey and valid.
 - Administrator may change operator password and appoint operator’s authorities.
 - Set and change administrator password and operator password in “Operation password setting” window. Old password is required to change password.
 - Password protection may be disabled. Keep the “New PSW” and “Confirm PSW” box of administrator in “Operation password setting” window null and the password protection will be disabled. The operator password will be invalid if administrator password is canceled. Therefore, you can’t keep operator password without administrator password.
 - You may keep administrator password only: keep the “New PSW” and “Confirm PSW” box of operator null; but the operator identity will be invalid.
 - If administrator appoints complete authority to operator and allows the operator to set and operate all items, then, they will have different passwords and the operator may customize all “System settings” except “Operator authority setting”.
 - The administrator is enabled with full authority by default and the authority setting of administrator is invalid. (e.g. cancel certain authority of administrator in menu.)

5.10 Play backup

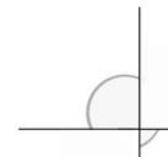

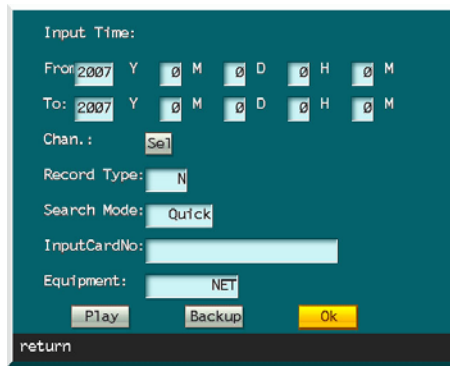

Input time Set the backup time. Backup will be performed in specified time period.

Select channel Select recording image. Only selected images will be backup.

Recording type Select the type of video recording. Common, alarm and all are available.

Searching mode Set the accuracy of recording searching. Exact search will search the entire disk, but it has a lower speed. Quick search is bisearch, which has a higher speed.

Input card number It is mainly used on ATM. You may also search according to card number.

Backup device External devices: flash disk, USD hard disk or USB CD-R.

5.10.1 Search and play according to time

Step 1: Select time

Select the time to play or backup video recording. Press numerical keys to enter time.

Step 2: Select channel

Play or backup the video recording of selected channel. Press [Menu] to enter dialogue box. Press [Menu] button to activate single channel and press "OK" to confirm.

Step 3: Select recording type

Common, alarm and all are available. Select Common to operate common video recording. Select Alarm to operate alarm video recording.

(Alarm video recording includes timing recording and detection recording.) Select All to operate all video recordings.

Step 4: Select searching mode

Quick search and exact search are available. Quick search isn't accurate enough. If exact search is selected, all video recordings will be scanned.

Step 5: Play

Press "Play" button to play and press "Backup" button to backup.

5.10.2 Backup

You can backup the contents in hard disk, network interface or CD-RW.


To backup in USB device: connect the device to USB interface (in front panel) and then enter the recording backup option in menu, as shown in picture above. Select "USB device" in backup device option. Then, move cursor to "Backup" button and press [Menu] to backup. (Stop recording before backup.) When the prompt "Done" is displayed, you can remove the USB device.


■ **Note:** Format the USB device in FAT or FAT32 format before using it for the first time.

To backup in CD-RW: First, configure the CD-RW device as the slave drive of first IDE or master drive of second IDE; enter the recording backup option in menu, as shown in picture above; select "CD-RW" in backup device option and select backup mode, operation mode, time period and recording type; move cursor to "Backup" button and press [Menu] to backup. When the prompt "Done" is displayed, you can remove the disc.

To backup in network, install client software first.

5.11 Tools

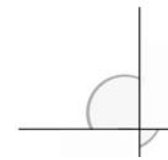

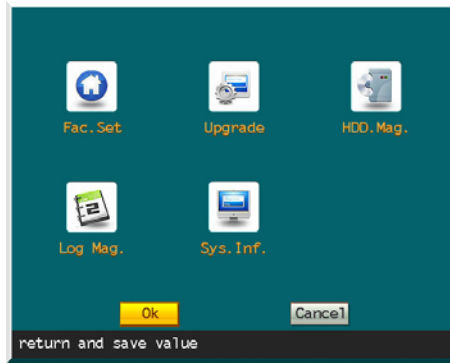


5.12 Factory settings

Restore default settings. It will take effect when the device is restarted. (IP and gateway are also reset.)

5.13 Upgrade

Upgrade the software. Check whether the language of original software is congruent with update. The update will fail if they don't have same language.

Select “**Upgrade**” and prompt box will popup. Two modes are available:

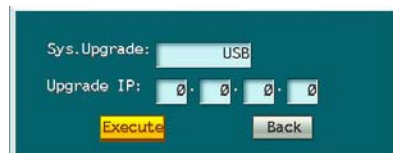

If network interface is selected, you need to input the host IP of server application; then, select “Execute” to update. The process will be displayed in a message window. The special update software must be run on PC at specified IP.

If USB is selected, make sure the USB device has been connected properly and the update application (upcmsdvr.bin) has been copied into

root directory of USB device. And the file name must be upcmsdvr.bin

Restart the recorder after update.

- **Note:** Do not interrupt the upgrading process. Cutting off power supply or pressing the power button is prohibited; otherwise, the recorder can't be run in order.

5.14 HDD management




HDD Info						Covered: 2
ID	Type	Steep	AllSize	FreeSize	State	
1	IDE HDD	N	5.00	4.00	ERR	
2	CDRW	Y	4.00	6.00	NOR	
3	DVDRW	Y	5.00	23.10	NOR	
4	NONE					
5	SATA HDD	Y	34.56	4.56	NOR	
6	IDE HDD	N	2.34	34.54	ERR	
7	CDRW	Y	1.23	4.56	NOR	
8	DVDRW	Y	6.78	9.09	NOR	


Format ResumeData HDDCheck Back

open hidden setting

Change the password of data saving. It will take effect after format. Press [Menu] button and the format dialogue box will popup. Password is needed.

- **Note:** All disks will be managed as a whole. You can't manage a single disk separately. To manage a disk, open the case and remove other disks.

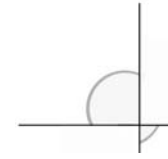

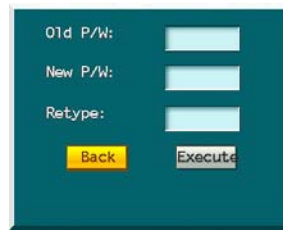

Press numerical keys to input old password (default: 88888888). Input new password. The password contains figures only. The new password may be same to old password. Repeat the new password. The system will prompt if you didn't input same new password. When password is confirmed, click "Back" to cancel format; or click "Execute" to format. When the hard disk is formatted, all files will be deleted. You need to input valid password to format the hard disk.

5.14.1 Recover data

Click "Recover data" to restore the data in hard disk.
Input the password (default: 88888888). Click "Back" to cancel the operation;
or click "Execute" to restore the data.


5.14.2 HDD check (not available at present)

5.15 Log management


View the log recorded in the digital video recorder. All operations will be recorded in log. Run Log management to view all operations of the video recorder.

5.16 System information

Run System information to view the information of the video recorder, as shown in the picture below:

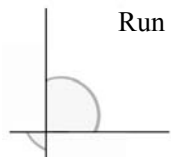

DVR Type: DVR5116 Version: 5.300
PAL Prod.Date: 2007/04/30
PIC Size: 576*768 WorkHDD: 2
HD Disk: ■■■■■ CD/DVD-RW: ■■■■■ DVD-RW
HDD Size: 5.00 Free: 4.00
Rec From: 2007/01/01 01:01:01
To: 2007/03/03 03:03:03
CoverType: Covered: 2
MAC Addr: 30-31-32-31-30-33
IP Addr: 192.168.001.192
[Back](#)
return

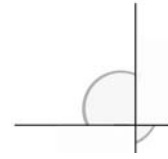

Chapter V. NETDVR Operation Instruction

Netdvr is the new generation network video monitoring software developed by us. It is integrated with powerful channel management function. You can monitor the audio/video through network. It supports network searching and playing, network backup and TCP/Multicast protocol, and may build perfect monitor center system with Managecenter.

6.1 Features

- Powerful multi-channel management function: support single channel and 4/9/16/25/36/49 channels; the operations between different channels are independent;
- Each channel may be customized separately and the number of IP addresses for each channel is unlimited (i.e. the number of video recorders is unlimited); you may also switch the channel of recorder (IP);
- Define the video recorders of certain channel; after setting, user may poll all video recorders of this channel manually or automatically;
- Multi languages (English, simplified Chinese, traditional Chinese) and skins (7 options available);
- Internet proxy management;
- Support Multicast function and up to 20 users may access a same video recorder; (Note: WAN Multicast function is invalid if you monitor the scene in WAN and the multicast function of router is disabled.)
- Perfect user management function and multilevel account authority management function: ADMIN is the super management account and defines the authorities of GUEST; perfect log management function;
- Convenient network list searching function: you can play or backup the common recording and alarm recording data with list and input a time period to search for recording data;
- Support network control of pan/tilt;
- Two modes are available to realize full screen in multi-channel monitoring: double click the window of monitored channel; click multi-image full screen in monitoring menu. In multi-image full screen, you click a window to display it in full screen;
- Support synchronized local A/V recording and shooting (support pause shooting); circle playing and progress bar playing of local

recordings.

6.2 Configuration

➤ Operating system

Simplified Chinese version: Simplified Chinese Windows 98/2000/ME/XP/2003/vista;

Traditional Chinese version: Traditional Chinese Windows 98/2000/ME/XP/2003/vista;

English version: English Windows 98/2000/ME/XP/2003/vista.

➤ Hardware

CPU: P4 2.0 or higher;

Memory: 512MB or more;

Graphics memory: 64MB;

LAN card: 10/100/1000MB

➤ Bandwidth

4-channel – ≥ 2 MB;

9-channel – ≥ 5 MB;


16-channel – ≥ 8 MB;

25-channel – connect client and video recorder with 100MB network device.

Install DirectX9.0 or above to get better playing quality.

6.3 Start software

Click the Netdvr.exe on desktop to launch the software. The following dialogue box will popup:

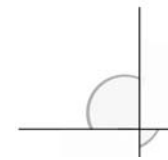





This dialog box will initialize Administrator account. Please input and repeat the administrator password and then click "OK". The system is in English interface by default when you use the software for the first time.

6.4 Main menu

When the account is initialized, enter the main interface as shown in the picture below:

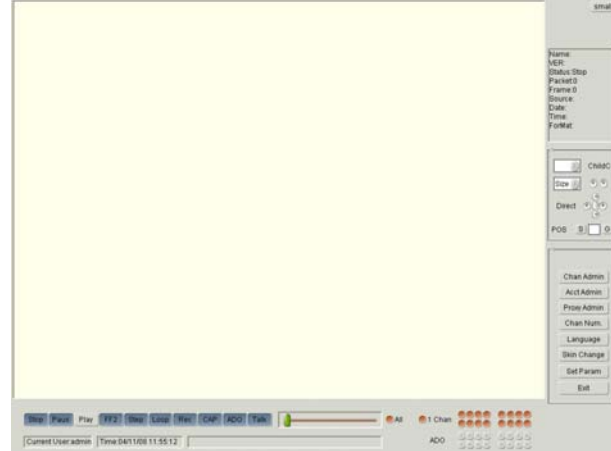


The interface is in English by default. Select "Language" and "Skin change" to customize the language and skin.

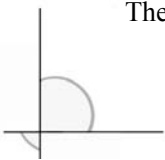

- **Note:** The software is in single channel when it is initialized, however, you may select multi channels.

6.4.1 Channel management

After the settings of language and skin, enter “Channel management” to input IP address of video recorder and customize the parameters, as shown below:

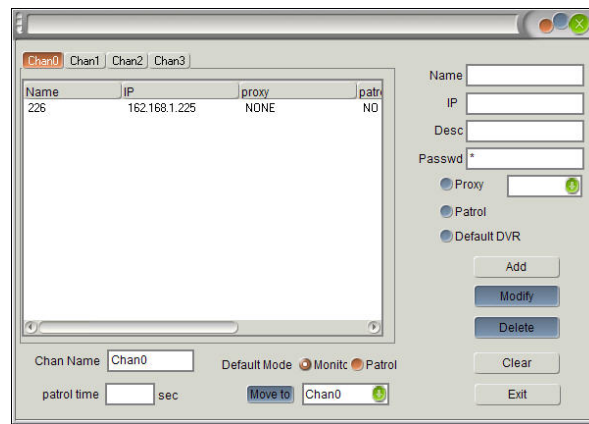

- **Note:** You need to input “Name”, “IP” and “Password”; the password here is for hard disk (the password used to format hard disk, instead of administrator password).

Name: The video recorder that user has added.


IP: IP or domain of current video recorder in LAN/WAN.

Description: Description of user.

Password: The password used to format the hard disk (default: 88888888). You can't watch the video if password is invalid.

Proxy: You need to set this item if you access the video recorder through proxy. It relates to the setting of “Proxy management” and you may select a proxy server in “Proxy management”.


Patrol: If two or more video recorders are added in this channel, you need to select this option to patrol the recorders in this channel in poll

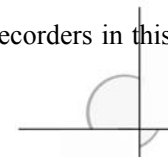

mode.

Default DVR: The recorder that user added to this channel. If this option is selected, the DVR will be connected directly when you view the scene.

Add DVR: Enter the three items and click “Add”, and the DVR and information will be displayed on the left, as shown below:

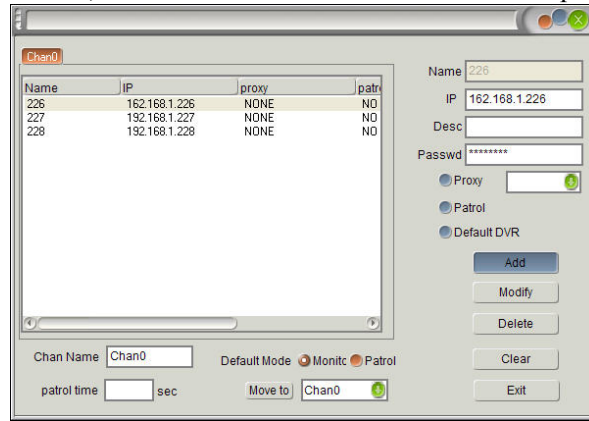

The status bar on the left displays the three added video recorders and their parameters. All the three added recorders are set as default DVR. When you view the scene, the software will connect to the first DVR in the list directly, e.g. “226” in the picture above.

Modify DVR: Modify the parameters of added DVR. Select a DVR in status bar and click “Clear” button, then, input the parameters and click “Modify”.

Delete DVR: Select a DVR in status bar click “Delete”.

Channel name: Customize the channel name, as shown in picture above.

Default mode: Monitor and Patrol are available.


Patrol time: 5 sec by default.

Move to: In multi-channel control, you can move any DVR from one channel to another.


6.4.2 User management


User management includes three items: Account, Authority and Log.

Account management: Administrator account features: set the authority; create and delete guest account; change administrator password and type of other accounts, as shown in the picture below:

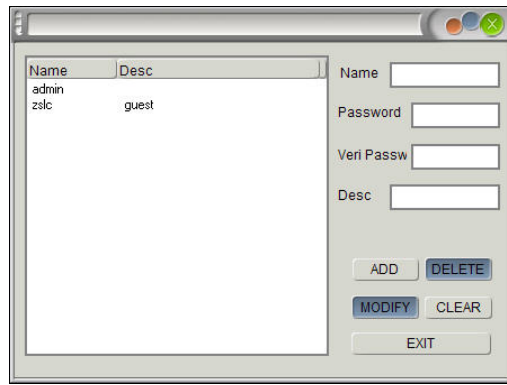

You need to input Name, Password and Verify password. Then, click “Add” and the name and description of added account will be displayed in the status bar on the left, as shown below:

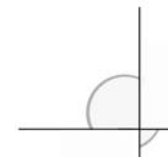

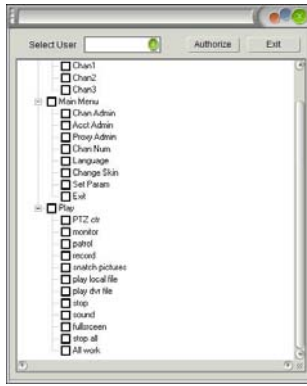


Authority management: When zslc is added as guest account, click this option to appoint the authorities of zslc. Select “zslc” in “Select user” drop menu and then select the authorities.

In the picture above, select “Channel 1”, “Language”, “Change skin” and “Play”, then, click “Authorize” button and zslc account will be enabled with the following authorities: all playing authorities in “Channel 1” and “Language” and “Change skin” in main menu. For other operations, a warning window will popup: No authority.

Log management (not available at present)

6.4.3 Proxy management

To use this function, another proxy software is needed. If this function is enabled, it will connect to the IP of proxy server instead of DVR when you view the scene. When proxy server is started, up to 20 users may access a same proxy server to view the video scene.

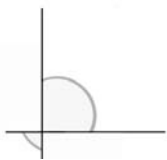



Name: Name of proxy server;

IP: The IP address of PC that proxy software runs on;

Proxy user: User name of proxy software;

User password: User password of proxy software;

Verify password: Enter same password as “User password”;

Description: Description of proxy server.


As shown in the picture above, the proxy software is launched on PC with IP address as 192.168.1.1 and the user name is xing.

6.4.4 Channel number

Channel number item is controlled through multi-channel. Take 9 channels as an example:

If user selects 9-channel centralized control, the Netdvr software will be displayed in 9 channels (9 video windows). Then, enter “Channel management” to add DVR and customize the each channel, as shown in the picture below:



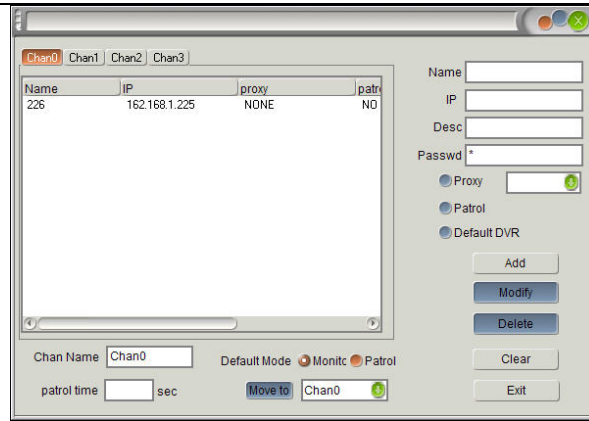

Different from single channel, you need to customize Channel 0, Channel 1, Channel 2...Channel 8 separately.

- **Note:** The number of DVR in each channel is unlimited. After setting, the operation of each channel is independent.

6.4.5 Language


Three languages are available: Simplified Chinese, Traditional Chinese and English (default).


6.4.6 Change skin

Seven options are available.

6.4.7 Local settings

Local setting is necessary. It relates to the image quality and storage path of backup files, etc.

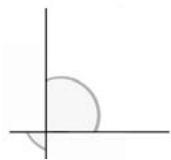

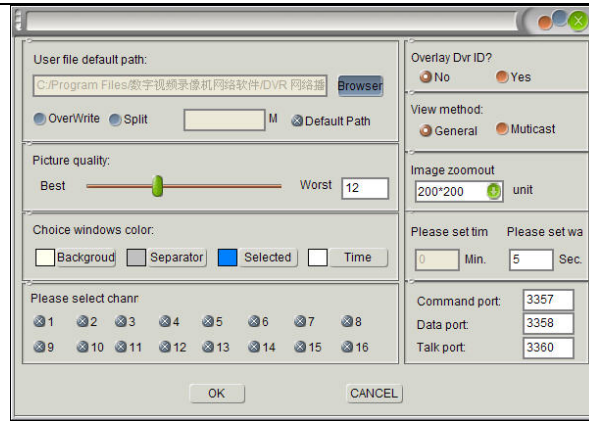

Storage path: The storage path of backup files and recording files. You can use default path (select “Default path”) or customize the path. You can select to overwrite the backup or recording files or not. If the size of recording file is too big, you can split the file into different segments. Input the size (unit: MB) of segment. You can select one segment to play or play all the segments in sequence.

Image resolution: Modify this parameter to play video streams of different resolutions. The system will recognize the resolution automatically.


Image quality: Set the quality of image. Higher quality will cost more system resource. (Select lower quality to get better PC performance.)

Window color: Select the colors of background, separator of separate window, separator of selected window and time. If the image is in light color, select black for time. The time is displayed in gray color only. The colors in the picture above are default.

Select channel: If only one channel is selected, only the data of channel 1 will be sent when you view the scene and play recording files; if multiple channels are selected, the data of all selected channels will be sent. The system will send the data of all channels by default. The setting will take effect after reconnection.

Add DVR ID: Select “Yes” to add the channel number of DVR on the image. (Default: No)

View mode: Common and Multicast are available. Their difference is: only one user may view the DVR if Common is selected, while

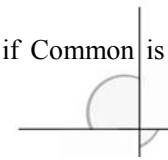

multiple users may view the DVR at the same time if Multicast is selected. If there is a user viewing the image in multicast mode, all users will access the DVR in multicast mode. Up to 20 users may view the images in multicast mode at the same time. Default mode is “Common”. The setting will take effect after reconnection.

Image zooming: Customize this parameter to zoom the image. When you view the scene or play recording files, hold the “Ctrl” key and double right click on the image.

Set overtime: This function is for special users. All operations of the system will be stopped automatically if the mouse isn’t moved within this period of time. Input 0 to disable this function.

Set delay time: Set network delay to keep the continuity of images. For example: if the delay time is 5 seconds, the data sending will be delayed for 5 seconds after reading, so that there will be enough images in buffer area, but the images at the network end will be 5 seconds later than the scene. Input 0 if you have high requirement on real time.


Command port: (Default: 3357) You can change the port to adapt to the setting of firewall or router. Make sure the port is same to the setting of the DVR you will access.

Data port: (Default: 3358) You can change the port to adapt to the setting of firewall or router. Make sure the port is same to the setting of the DVR you will access.

Talk port: (Default: 3360) You can change the port to adapt to the setting of firewall or router. Make sure the port is same to the setting of the DVR you will access.

6.4.8 Exit

Exit the software.

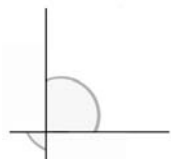

Chapter VI. Specific Operation of NETDVR

7.1 Right-click menu

Move cursor to display area and right click, and the menu as shown below will popup:





7.2 View

Click "View" and the following two modes are available to connect:

1. If you have customized "Default DVR" in "Channel management", it will connect to the IP of default DVR and display the scene video;
2. If you haven't customized "Default DVR", the following dialogue box will popup:

Select a DVR and click "OK" to view the scene.

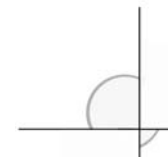

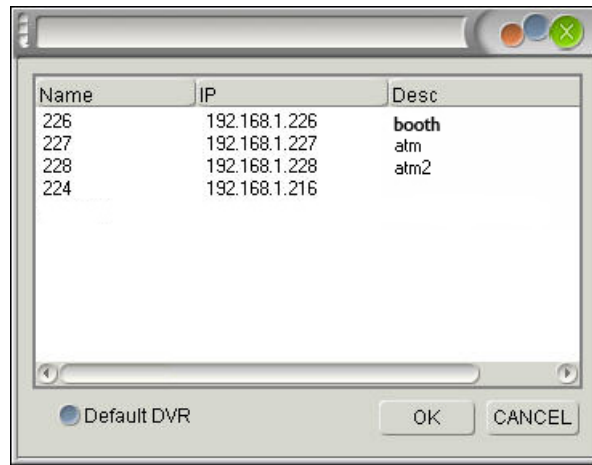



To select default DVR in this interface: Select a DVR and “Default DVR”.

When you are viewing the scene, you can zoom or switch the video windows, take pictures, record video and control PTZ.

7.3 Patrol

If you added multiple DVR to a channel and select “Yes” in “Patrol”, you need to input time in “Patrol time” (default: 5 sec).

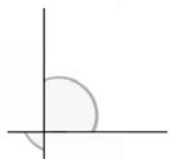

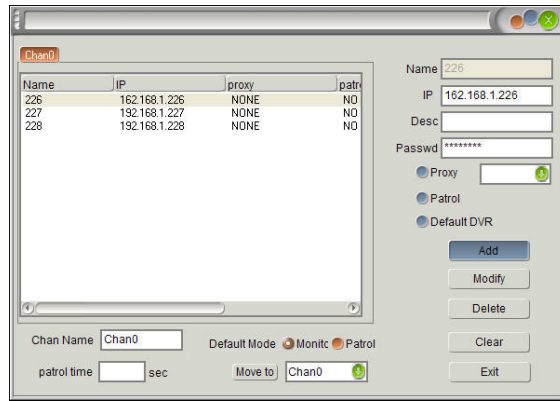

As shown in the picture above, select “Yes” for DVR 227 and 228 in Channel 0 and set the “Patrol time” as 5 sec.

After setting, right click in channel 0 and select “Patrol”, then, the software will connect to the IP of DVR 227 and 228 in channel 0 in sequence and patrol the images of each DVR according to the preset time. Patrol DVR 227 in the first 5 seconds and patrol DVR 228 in the second 5 seconds, then patrol DVR 227 in the third 5 seconds, and so on.

7.4 Take picture


Click “Take picture” button to take the picture of a single frame image. The naming rule of pictures is: time.bmp. The pictures are saved in C:\Program Files\DVR software\DVR player\CapFiles. You can open them in picture editing tools.

7.5 Record video

Click “Record” button to start recording and click “Stop” button to stop the recording. The files are saved in C:\Program Files\DVR software\DVR player\RecFiles. The naming rule of video recording files is: 4r+time.mpg.

7.6 Monitor audio

Click “Monitor audio” button and you can monitor the audio of the scene at the same time. Click “Mute” to cancel audio monitoring. (In multi-channel control, you can monitor one channel only; otherwise the audio will be mixed.)

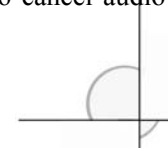

7.7 Adjust image quality and frame rate

Change the image quality and frame rate of front DVR. As shown in the picture below:

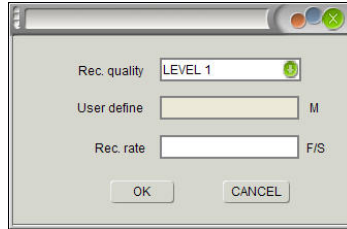


Image quality: Four options are available (Level 1-3, Custom). If Level 1-3 is selected, you can only change the frame rate.

Customize bit stream: If Custom is selected in Image quality, you can input the size of bit stream (unit: MB).

Frame rate: Input valid number (1-30).

The parameters here are effective to current video stream and won't be saved. For example, select Level 2 in Image quality and 25F/S in Frame rate. When you view the scene, change the frame rate into 12.5F/S, then, the frame rates of scene and the recording files of DVR are both 12.5F/S. Stop viewing or recording, then, perform the operation again, and the frame rate will turn into 25F/S.

7.8 Exit

Click "Exit".

Chapter VII. Keys Definition

You can press the following keys when you view the scene, play local files or operate the DVR.

Stop: Press this key to cancel the monitoring.

Pause: When you play local files, operate DVR files (list playing) or operate local DVR HDD, you can press this key hold the

playing and press "Play" to resume the playing.

Play: Press this key to play the recording files. When play the recording files, you can zoom in/out the window, take pictures, record video, play fast, pause or play in single frame.

Fast/slow playing: Press this key to realize fast/slow playing. You can check the current playing state in the information bar in upper right corner of the interface.

- Press this key for the first time to play in 1/8 speed;
- Press this key for the second time to play in 1/4 speed;
- Press this key for the third time to play in 1/2 speed;
- Press this key for the fourth time to play in 2 times speed;
- Press this key for the fifth time to play in 4 times speed;
- Press this key for the sixth time to play in 32 times speed;
- Press this key for the seventh time to skip frames;
- Press this key for the eighth time to play in 1/8 speed; and so on.


Single frame: In playing or pause state, press this key to play in single frame.

Repeat: Press this key to play the recording file repeatedly.

Record video: Press this key to start the recording and press "Stop" to stop the recording. The files are saved in C:\Program Files\DVR software\DVR player\RecFiles.

Take picture: Press this key to take the picture of a single frame. (support pause & shooting)

Audio: It has same function with "Monitor audio". Press this key to enable audio and press "Mute" to disable audio. The audio of first channel is played by default when audio is enabled. You may press "Audio channel selection" key to realize this function, as shown in the picture below:

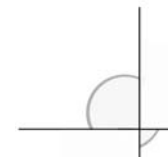

The corresponding audio channels are: 1.2.3.4. 9.10.11.12.
5.6.7.8. 13.14.15.16.

When audio is enabled, select “Channel 1” to play the audio of channel 1; select “Channel 2” to play the audio of channel 2; and so on.

Talk: Press this key to realize talk function. The network end and front DVR scene may talk to each other. Press “Stop” to end talk function.

Video channel selection: Display video channel or not. As shown in the picture below:



The corresponding video channels are: 1.2.3.4. 9.10.11.12
5.6.7.8. 13.14.15.16

“All channels” are played by default, i.e. the images of all channels will be displayed. Select “Single channel” and only the images of “Channel 1” are displayed. Press “Single channel” button and then you can select any video channel, e.g. select “Channel 5” to display the video of channel 5; select “Channel 9” to display the video of channel 9. Select “All channels” to display the images of all channels.

Progress bar: This function is only suitable for the playing of recording files in local hard disk. You can drag the progress bar to perform fast/slow playing.

Information display: The instant information of current file is displayed in information bar.

Name: The name of DVR in “Channel management”. This item is null by default when you play local files.

Version: Display the version of DVR software when front DVR is connected. Display 5.000 when play local files.

Status: Display current playing status, e.g. fast/slow, etc.

Read data: The data that have been read (count in 8MB). When front DVR is connected, if the data packet is empty, it indicates that the network or the DVR is abnormal. Please wait for a moment and connect again later.

Decoded frame: The data that have been decoded. If the read data are not empty, but the decoded data are empty, you probably input invalid password. Change in “Channel management”.

Source: Display the source of current video, e.g. file, network, etc.

Date/time: The date/time of current video.

Resolution: The resolution of current video.



Chapter VIII. Pan/tilt Control

9.1 Pan/tilt control

Correspond the address setting of decoders to the images and press the PTZ key on front panel to control the pan/tilt. The numerical keys on front panel correspond to the addresses of decoders and you need to press the numerical key that accords with decoder address to control the pan/tilt. For example, if 16 decoders are connected, set the addresses of decoders as 1-16 corresponding to image 1-16. The protocol and bit rate of the 16 decoders should be uniform. After setting, press the [PTZ] key and numerical keys on front panel to control.

The relationship between decoder keys and keys on front panel:

“Timing” “Alert” “Image quality” “Cancel” “Search” “Display” “Menu”

IRIS+ IRIS- ZOOM+ ZOOM- FOCUS+ FOCUS- AUTO ON /AUTO OFF

Aperture

Zoom

Focus

Auto



correspond to:

UP


DOWN

LEFT

RIGHT

■ **Note:** Set channel number, decoder type, bit rate and address in decoder parameters. You can't control the pan/tilt if any one of the parameters is invalid. Generally, the positive and negative pins of decoder are connected with T+ and T- of 485-interface. If the 485-interface is of RJ45 head, then, connect the first pin and second pin (1+/2-).

9.2 Network pan/tilt control

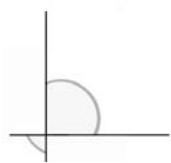



Sub-channel: Correspond to the channel number of DVR. The channel number of pan/tilt you select on DVR is same to the channel number of network controlled pan/tilt.


Size: Size, Focus, Aperture, Rainbrush, Light and Auto are available in the drop menu. Select an item and control with the direction buttons on the right.

Direction: Control the direction of pan/tilt.

Prearranged point: Up to 63 points may be arranged. Input "6" and click "Set" to save the current position as the sixth point, then, press direction keys to move the pan/tilt; input "16" and click "Set" to save the current position as the sixteenth point. To return pan/tilt to previous position, input "6" and click "Cancel".

■ **Note:**

Make sure the pan/tilt control function of background DVR in the monitoring system is valid. The DVRPLAY software can't control the pan/tilt if the background DVR isn't enabled with this function. When you control the pan/tilt with DVRPLAY, if the command is invalid, please check whether the "PTZ" key on DVR has been reset (i.e. the "PTZ" symbol on LCD is disappeared). You can't control the pan/tilt at PC end if it hasn't been reset.

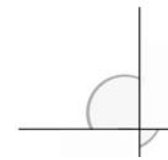

Chapter IX. Troubleshooting

Thanks for purchasing the product of our company. We will provide services for you wholeheartedly. If any fault occurs, please check according to the following procedures. If the problem still can't be solved, please call the hot line or send e-mail. If you have many questions, please write them down and send to us. We will reply in time.

Common detecting methods:

- [1] Replace (replace power supply or hard disk, etc)
- [2] Minimum load (remove hard disk, video, audio, alarm input/output)
- [3] Upgrade (solve the problems of peripheral devices)

(I) Start, self detection, breakdown

1. Why the DVR isn't started when power supply is connected?

- Check whether the power switch at the rear is "ON"; Check whether the indicator on front panel is lit.

2. Why system stays in self detection after boot logo?

Check whether the HDD is connected properly and whether the HDD and cable are in good condition. To check the HDD, remove it and turn on the DVR. The DVR may be turned on normally even without the HDD and displays "No HDD, continue?". Click "Yes" to operate the DVR.

3. Why the boot process is slow?

- The system will search the data when boots. If too many data are saved in the HDD, it will take longer time; The error of HDD will make the DVR to detect the HDD repeatedly.

4. Why the DVR restarts repeatedly after self detection?

- Check the HDD. If the HDD hasn't been formatted or the HDD has fault, the DVR will be restarted; Check the power supply of DVR;

Pull out the network cable and restart the DVR. Serious network fault may cause the DVR to restart repeatedly.

5. Why the DVR restarts repeatedly after long time running?

Check whether the HDD sectors are damaged; Check whether the video signals are normal. If it is confirmed that abnormality ever occurred and it still restarts when video input is stopped, please cut off the power of DVR and connect again later; Check the power supply of DVR.

6. Why I can't control the DVR with remote controller?

If the infrared indicator on front panel isn't lit, please check whether the battery has electricity or whether the remote controller is damaged.

7. Why breakdown occurs in the normal video playing or viewing process?

Check whether the HDD is connected properly; replace the HDD if it is damaged.

8. Why the monitor (TV set) has no image or can't be started after update?

Keep the power supply stable in the upgrading process. If the power supply is cut off, the update will be failed or even the DVR can't be started. Then, please update the DVR again. If the update fails or can't update, please contact the supplier.

(II) Image display/monitoring

1. Why the images in monitor or TV set are black and white?

Check whether the systems of video input, DVR and monitor or TV set are uniform. If not, select "Auto" for monitor or TV set.

2. Why the monitor doesn't display anything?

There is a black screen process (about 30 seconds) when the DVR is starting; If there is no image displayed when the DVR is started for a long time (more than 60 seconds), please check whether the monitor is turned on and whether the video cable is connected properly. If there is no problem, please check whether the VDF display on front panel of DVR is lit; if it is normal, the system communication is normal. Then, connect the video signals to the monitor directly to check whether there is signal and whether the circuit has fault.



3. Why the images are distorted?

- Check whether the video connection is short circuit or open circuit, or has false welding or poor connection; Video cable is interfered with by strong electricity; do not install the video cable and the strong electricity circuitry together and also choose qualified shielded cable; In the whole system, connect only the center DVR to earth; otherwise, it will cause common mode interference; connect the grounding screw at the rear side of DVR to earth; Check whether the DVR, monitor or the circuitry is aged.

(III) Video recording/playing, recording data, backup

1. Why the recording has no audio?

- Check whether “Mute” is activated; Check whether “Audio” is selected in the settings of video recording; Check the audio input cable.

2. Why I can't perform timing recording or can't record any data within the period?

- The period of timing recording is invalid. The time points should be within 00:00-24:00 and the end time must be later than the beginning time; The power supply is cut off in the timing recording process; The desired data have been overwritten; The HDD has physical damage or logical error and the data can't be read normally.

3. Why I can't perform moving recording or alarm recording?

- The time period of moving recording or alarm recording is invalid. The end time must be later than the beginning time; No motion detection area is selected; no alarm recording channel is selected; The sensitivity of motion detection is too low; the alarm isn't triggered correctly; please check the alarm input and triggering device.

4. Why the recording isn't continuous?

- If manual recording or timing recording is selected, check whether the power supply was cut off or voltage was abnormal during the recording process; If motion detection recording or alarm recording is selected, check whether alarm occurred. The alarm will trigger the recording and record according to the preset time.

5. Why “Auto-overwrite” is invalid when recording is activated?

Check whether the “Overwriting mode of recording” is “Auto cycle”; Check whether the HDD has logical error or physical damage. If there is logical error, connect the HDD to PC and delete the partition information or repair the HDD and connect it to the DVR. If there is physical damage, replace the HDD.

6. Why there is no response after click “Backup” when I use client software to backup DVR data?


Check whether firewall is enabled. The client software may not backup the DVR data if firewall is enabled.

7. Why the time skips when I play the recording files?

It is usually caused by the adjustment of time. To avoid this situation, please check whether the data need to be saved before adjusting the time. If not, please format the HDD when the DVR is started after time is adjusted.

8. Why the image playing is slow?

Check whether slow playing is enabled. The DVR supports 1/2, 1/4, 1/8 and 1/16 speed slow playing; Check whether the HDD is connected properly and whether the HDD has bad sectors. The bad sectors of HDD may cause image intermission or screen mess.

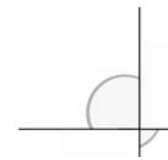


Appendix 1:

Specifications and Parameters

Item	Specifications and parameters
Compression standard	H.264
Video signal	PAL (625 lines, 50f/s); NTSC (525lines, 60f/s)
Video input	Composite video: 1.0V p-p/75Ω, BNC connector ×4
Video output	Composite video: 1.0V p-p/75Ω, BNC connector ×2
Audio output	RCA connector × 2
Alarm input	4-channel input . Trigger closed without Voltage, Open or Closed
Alarm output	1-channel output. Trigger closed without Voltage, Open or Closed
Alarm mode	Inductor input alarm; video dynamic detecting alarm; video loss alarm
Network	10/100M self adaptive Ethernet port, support LAN, WAN and ADSL dynamic IP networking
Control mode	Front panel, USB mouse, IR remote control, Network control
Backup mode	Network backup; external CD-R; USB interface
Resolution	Display: 704×576 Image: CIF 352×288

Hard disk	2 SATA Hard Disk
E-clock	Y/M/D; h/m/s
Encryption	Data encryption + secondary password management
Power	20W (exclude hard disk)
Environmental temperature	Working temperature: +5℃~+50℃; RH: < 90% Storage temperature: -20℃~+70℃; RH: < 95%
Dimensions	350×58×272mm(WxHxL)
Weight	N.W.: 2.4KG G.W.: 3.8KG

Note: Specification and appearance are subject to changes without prior notice. ■

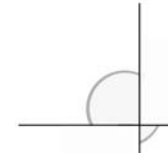

Appendix 2:

Packing List

Name	Quantity
DVR	1 Set
Power Cord	1 Piece
Power Adapter	1 Piece
IR Remote Controller	1 Piece
CD	1 Piece
Manual	1 Piece
Screws	1 Pack
Quality Certificate	1 Piece

