

H.264 KTM3H DVR User's Manual

(Model: 4/ 8/ 16CH H.264 DVR)

Installation and User's Guide


Rev. 1.6



Digital Video Recorder

* All contents of this document may change without prior notice, and actual product appearance may differ from that depicted herein.

Safety Precaution

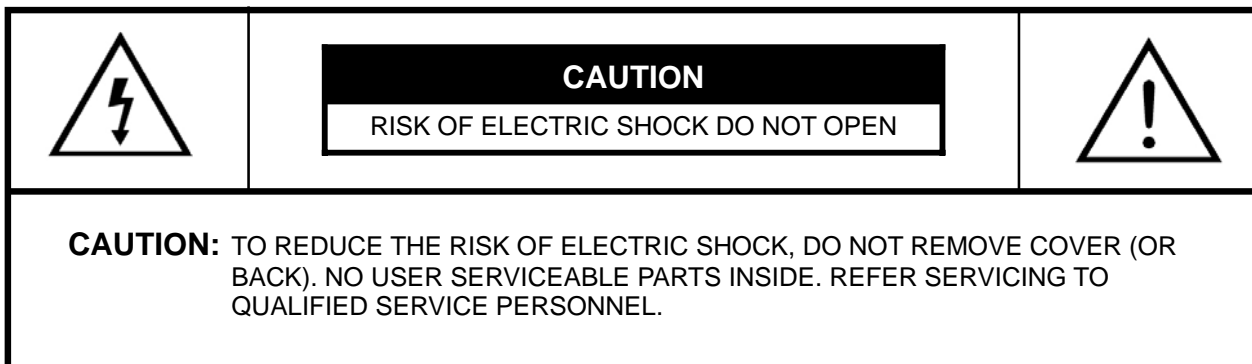

This label may appear on the rear of the unit due to space limitations.



The lightning flash with arrow point symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of importance operating and maintenance (servicing) instructions in the literature accompanying the appliance.

Warning

To reduce the risk of fire or electric shock, Do not expose this product to rain or moisture. Do not insert any metallic object through ventilation grills.



Power disconnect: Units with or without ON-OFF switches have power supplied to the unit whenever the power cord is inserted into the main source. To disconnect it from the main source, you have to disconnect the Power cord.

FCC COMPLIANCE STATEMENT

A CLASS A computing device subject to certification by the Commission shall be identified pursuant to Par 2.925 et Seq of the chapter. In addition, the label shall include the following statement:

**This device complies with Part 15 of FCC Rules.
Operation is subject to the following two conditions:
(1)This device may not cause harmful interference, and
(2)This device must accept any interference received,
including interference that may cause undesired operation.**

Where a device is constructed in two or more sections connected by wires and marked together, the statement specified in this Section is required to be affixed only to the main control unit.

The user's manual or instruction manual for the EUT shall contain the following statement or equivalent.

Caution: Changes or Modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

If the EUT requires accessories such as special shield cables and/or connectors to enable compliance with emission limits, the instruction manual for the EUT shall include appropriate instruction on the first page of the text concerned with the installation of the device that these special accessories must be used with the device. It is the responsibility of the user to use the needed special accessories supplied with the equipment.

For a CLASS A digital device or peripheral, the instruction furnished the user shall include the following or Similar statement placed in a prominent location in the text of the manual.

Note: This equipment has been tested and found to comply with the limits for a CLASS a digital device, pursuant to Part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment, This equipment Generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of the this equipment in a residential area is likely to cause harmful interference in which cause the user will be required to correct the interference at his own expense.

Preface

This document is a basic manual for the H.264 DVR users. The manual describes the appearance and name of products, how to configure the system program, and how to use the system. Please review the whole contents before using H.264 DVR, and access the product with caution.

The pictures and names of the products are subject to change depending on hardware upgrade. However, the usages may be similar.

To open the system case and touch the inner parts for corrective maintenance, a user should contact the place where he/she purchased the products to get the help from expert.

In addition, if there are any questions for use or any damage on the product, please contact the place where he/she purchased the products.

The pictures and names of the products are subject to change without notification. However, the usages may be similar.

Warning on Installation and Usage

1. Warning on Installation

- Install the product on a flat floor, open space, and keep the minimum of 6 inches distance from the rear panel to the wall.
- Install the product on a well-ventilated place.
- Keep it away from strong magnetism or electromagnetic wave.
- Installing it near to radio equipment such as TV or radio may cause a malfunction.
- Do not install it on a place directly exposed to the sun or other heating sources, such as near a heating apparatus.
- Do not install it on a cold place.
- While installing the equipment, keep the equipment and related tools in safe position to prevent any injury.
- Do not install it on a place with constant vibration, high humidity, grease, or dust.
- Should use the product in the rated voltage (The equipment requires DC 12V and the power supply included can be used for the voltage between 110V and 240V.)
- Connect it to the outlet with the ground terminal.
- Discard the vinyl bag well as it may be dangerous under a child's hands.

2. Warning on Usage

- For the repair, contact the company or the place where you purchased the product.
- Read the user manual before using the products.
- Do not open the cover at your discretion since parts are sensitive to the environment within the equipment.
- Arrange the power cord safely and do not touch it with wet hands.
- Do not use a loose outlet or a damaged power cable.
- Do not use benzene, thinner and alcohol for cleaning.
- Do not touch the exposed terminal.
- To properly turn off the system, use the power button on the front panel before disconnecting the power supply.
- Be careful to prevent a conductive object from falling into a hole that was punched for ventilation.
- Do not disassemble nor remodel the product.
- Do not place a heavy object on the body.
- Handle with care while moving the equipment.

In case of any smoke or odor emitted, immediately block the power switch and contact the company you purchased the products to consult it with a special technician.

Contents

1. Product Contents	7
2. Features	8
3. Product Description	9
3-1. Front Panel Connection	9
3-2. Rear Panel Connection	9
3-3. Front Panel Description	10
3-4. Rear Panel Description	12
3-5. Remote Controller	14
4. Main Menu Programming	15
4-1. Overview Main Menu	15
4-2. DVR Menu Tree	16
4-3. System Setup	17
4-4. Display Setup	19
4-5. Recording Setup	20
4-6. Event Setup	21
4-7. Schedule Setup	23
4-8. Network Setup	24
4-9. Copy Setup	25
4-10. Hard Disk Setup	26
4-11. Camera Setup	27
5. Live Display & Recording	28
5-1. Live Picture Display Mode	28
5-2. OSD (On Screen Display) on Live Mode	29
5-3. PTZ Control	30
5-4. Recording Options	30
6. Search and Backup	31
6-1. Search List	31
6-2. Search by Recording Type	32
6-3. Search by Time & Date	32
6-4. Playback	33
6-5. Backup	34
7. USB Mouse Operation	35
7-1. Mouse Operation on Live Display	35
7-2. Mouse Operation on Search	36
8. Firmware Update	37
Appendix 1. H.264 DVR Specification	38
Appendix 2. Description of Terminals	39

1. Product Contents

At the point of purchase, please verify that following contents are included:

- **H.264 DVR KTM3H S** - 4//8/16CH Stand Alone DVR
- Power Supply (12V/5.8A)
- Power cord
- User's manual (inside "CMS Install CD")
- Quick Guide
- CMS Install CD
- Remote controller (two 'AAA' batteries included)



H.264 KTM3H – S DVR Series



Power Supply



Power Cord



User's manual
(Inside CMS install CD)



Quick Guide
(Inside CMS install CD)



CMS Install CD



Remote controller

2. Features

H.264 DVR is an embedded Stand-Alone DVR, based on Linux. It is capable to record 4/8/16 channels of video and audio. It is also capable to playback, live display, back-up and network function while it is continuously recording. And it also offers the following features:


- **4/8/16 composite video inputs**
 - Compatible with color (NTSC or PAL) and B&W (CCIR and EIA-170) Video.
- **1 composite video outputs / 1 VGA output**
- **1 S-Video output (exclude 4ch models).**
- **4/8/16 channels of audio inputs / 1 channel of audio outputs.**
- **1 HDMI (High Definition Multimedia Interface) Output**
- **High quality video display and recording:**
 - NTSC (720x480), PAL (720x576) real time display.
- **Compression: H.264 for video, G.723 for audio.**
- **Multiple search methods (date/time or recording types).**
- **Real time recording and playback support:**
 - 480 FPS recording and playback for NTSC at CIF image (400 FPS for PAL).
 - Pre-recording by event (Motion or Alarm)
- **Continuous recording in disk overwrite mode.**
- **Pentaplex: simultaneously monitor, record, playback, back-up and network.**
- **Easy back-up to external devices:**
 - CD/DVD back up and USB 2.0 memory drive support.
- **User-friendly GUI menu, operating with USB mouse.**
- **PTZ camera control support from the unit and remote access.**
- **4/8/16 alarm inputs / 4 relay outputs available.**
- **Various network functions:**
 - Access through static IP, dynamic IP (DHCP, floating IP), or DDNS.
 - View live or retrieve recorded video via remote connection.
 - Change configuration from a remote location.
 - Support multi-user access (up to 5 users can be connected simultaneously).
 - Support CMS (Center Monitoring Software) to access multiple sites at once.
 - Two way audio transmission and remote event (alarm, motion) notification.
- **Audio recording and playback:**
 - Record 4/8/16 channels of audio inputs
 - Playback 1 selected channel on 1 audio output available.

3. Product Description


3-1. Front Panel Connection



3-2. Rear Panel Connection

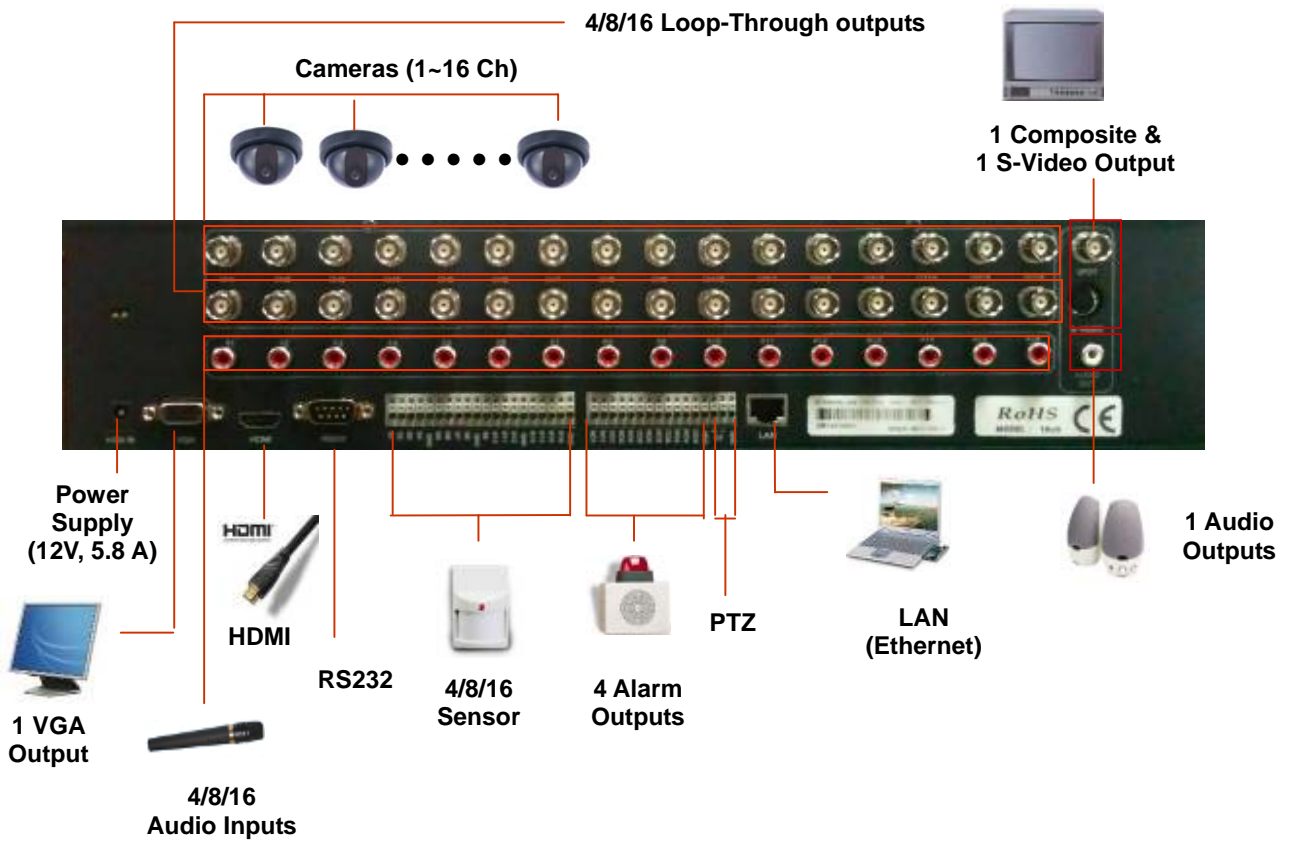

3-3. Front Panel Description

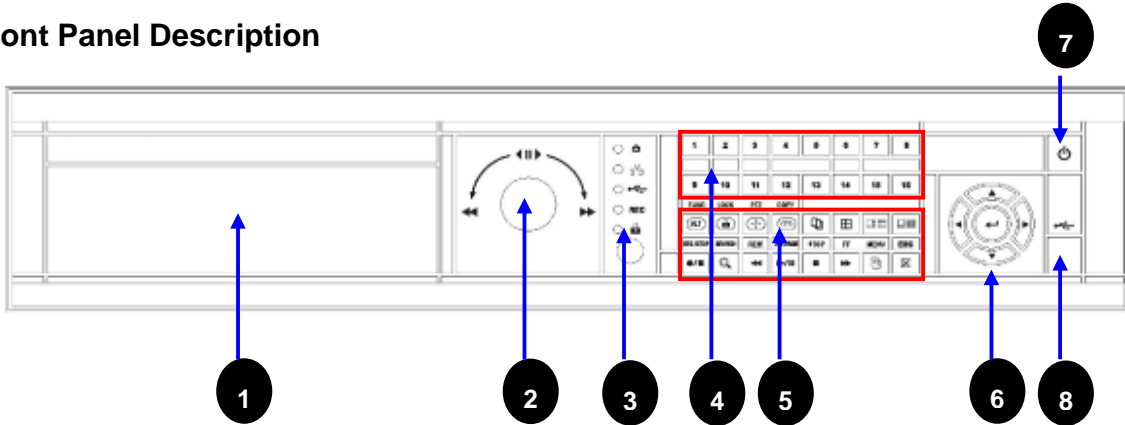

1. **CD Tray:** This place can hold various types of backup media. A DVD rewritable drive is installed at default.
2. **Jog and Shuttle:** Jog and shuttle enables user to operate DVR easier in handling such as fast forward, fast reverse playback and one frame movement in still picture.
3. **LED Indicators**




- **Power:** LED turns on red when power is on.
- **Network:** LED turns on green when a connection established remotely.
- **Copy:** LED turns on green while copying data to CD, DVD or USB device.
- **Record:** LED turns on red while recording images.
- **Key Lock:** LED turns on yellow if Lock function is enabled.
- **Remote Controller Receiver:** sensor input window for remote controller.



 




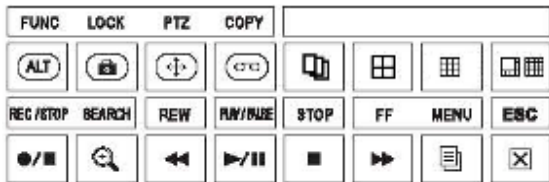














4. **Channel Selection Buttons** These buttons, from Ch. 1 to Ch. 16, allow user to select a specific channel to be displayed on the monitor.

1	2	3	4	5	6	7	8
9	10	11	12	13	14	15	16


5. Function Buttons



 - 1) **FUNC** This button enables additional features for other buttons when combined.
 - **FUNC** + **ENTER**: Display system information (video format, HDD info, IP Address, version, etc.).
 - **FUNC** + **MENU** : Opens interface to select a channel for audio output.
 - **FUNC** + **ESC** : Turns on/off motion detection display, for channels with motion recording.
 - **FUNC** + **STOP**: VGA resolution change from VGA to XGA
 - **FUNC** + **COPY**: Display backup progressing bar when user go back to live mode (if backup is not finish)

- 2) **LOCK**  This button enables key lock for the DVR unit. Once pressed, yellow key lock LED turns on and all features and settings are not accessible unless it is unlocked first. To release key lock, button locking, press this button again and password is required to release. While DVR is under key lock mode, the icon will be appeared on the left top corner of monitor: 
- 3) **PTZ**  This button enables control mode for PTZ (Pan, Tilt, and Zoom) camera(s). If available, PTZ camera(s) must be properly wired and configured first. While it is enabled, select a camera that is configured for PTZ, and press direction buttons to pan and tilt,   to zoom in and zoom out. Press PTZ button again to exit from the control mode after usage. While DVR is under PTZ mode, the icon will be appeared on left top corner of monitor. 
- 4) **COPY**  This button initiate retrieving recorded files into backup media. Depending on the device selected under setting, selected data will be copied to USB memory drive or CD/DVD. According to backup media, proper icon will be appeared on the left top corner of monitor.  
- 5) **(Sequential Display button)**  This button enables auto sequential switching under selected video display mode. For example, if this button is pressed under the quad mode, the display will be switched sequentially from the quad picture of Ch. 1~4, Ch. 5~8, Ch. 9~12, and then Ch.13~16.
- 6) **(Display mode buttons)**    Whenever these buttons are pressed, display mode can be changed from the quad, 9 Ch., and 16 Ch. display mode. If the quad button is pressed again, the display will be changed from the quad picture of Ch. 1~4, Ch. 5~8, Ch. 9~12, and then Ch.13~16 as repeated. For 9 Ch. Button, the display will be changed from Ch. 1~9 to Ch. 8~16.
- 7) **REC/STOP**  This button starts and stops recording manually. When DVR is under recording mode, the icon will be appeared on each channel: 
- 8) **SEARCH**  This button enters to the search mode. Under search mode, playback and backup are available.
- 9) **REW**  This button controls backward speed under playback mode, supports 2 to 16 times playback speed as pressed repeatedly. Also, this button zoom-out under PTZ mode.
- 10) **PLAY/PAUSE**  This button starts/pauses playback. The button toggles between playback and pausing.
- 11) **STOP**  This button stops playback and return to the data selection screen.
- 12) **FF**  This button controls fast forward speed under playback mode, supports 2 to 16 times playback speed as pressed repeatedly. Also, it controls zoom-in under PTZ mode.
- 13) **MENU**  This button is to enter main menu of DVR.
- 14) **ESC**  This button is to return to the upper menu.

6. Direction buttons and ENTER Button

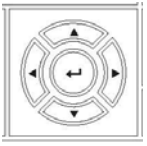

Direction buttons are to move LEFT, RIGHT, UP and DOWN in menu.

They also can be used while entering password. **ENTER** button, in the middle, is to select, save, and apply parameters in the menu.

7. Power Button (Power On/ Off button)




This Power button can be pressed to turn off DVR power. When this button is pressed, password is requested. When right password is input to DVR, DVR power will be turned off.

8. USB 2.0 connector



These 2 USB Connectors can be used for a mouse and a USB Memory device. Device(s) will be automatically detected upon connection.

3-4. Rear Panel Description

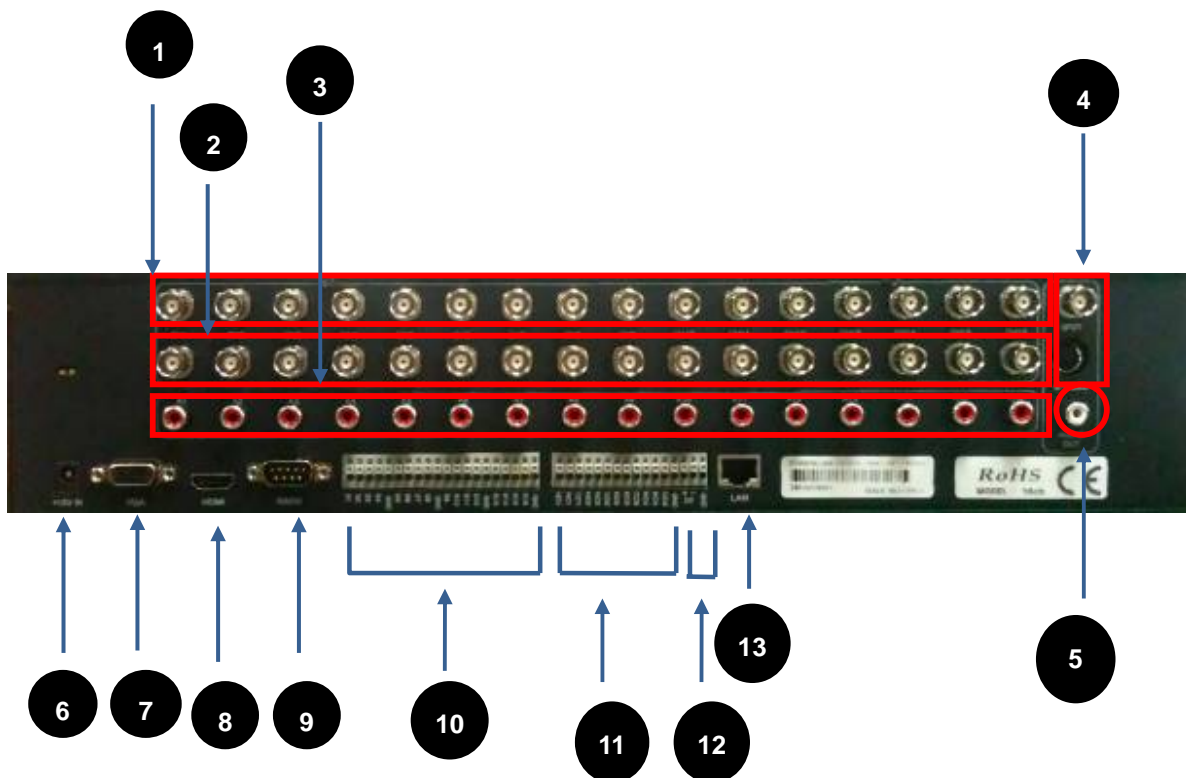


1. **16 Ch. Video Input:** 16 channels of composite video inputs with BNC connectors. **H.246 DVR** automatically detects video format (NTSC or PAL) at power on, and both NTSC and PAL video sources are acceptable. However, type of video sources cannot be mixed. All 16 inputs in a unit must have unique video format, NTSC or PAL. **H.264 DVR** will not operate properly if there are mixed video types.

2. **4/8/16 Ch. Loop through Outputs:** 4/8/16 channels of composite video outputs with BNC connectors that provide loop-through video outputs. Outputs may be connected as inputs to other video equipments if required.
3. **4/8/16 Ch. Audio Inputs (RCA):** 4/8/16 channels of unbalanced audio signal inputs with RCA connectors. The audio input must be an amplified audio source, such as amplified microphone.
4. **1 Ch. Composite Video Outputs and 1 S-Video Output:** Two composite outputs (MON 1 and MON 2) and S-Video output provide main video output for live display and search. They are same video output. Another composite output (SPOT) provides a single channel spot monitor output that displays all connected video inputs, one at a time, sequentially.
5. **1 Ch. Audio Outputs (RCA):** 1 channels of identical audio outputs. It is required to be connected to speaker, headset or any other equipment as an audio input.
6. **Power Input:** Connect power supply (DC 12V/5.8A).
7. **VGA Outputs:** Provide RGB video signal that is identical with MON 1, MON 2, and S-Video outputs.
8. **HDMI port (high resolution video output):** Connect to the HDMI or DVI port of digital TV or wide TV/ Monitor in order to surveil a vision for camera or movie with HD quality level like 480p /720p/ 1080p or VGA resolution with high quality.
9. **RS232C:** To be utilized for future options.
10. **Alarm Inputs:** 16 alarm inputs to connect with external devices to trigger various DVR events. Mechanical or electrical switches can be wired as inputs. The threshold voltage is 4.3V, and the signal should be stable at least 0.5 seconds to be detected.

To make secure connections on the Alarm Connector Strip, press and hold the button and insert the wire in the hole below of connector pin. After releasing the pin, pull gently on the wire to make certain it is connected. To disconnect a wire, press and hold the connector pin above the wire and pull out the wire.
11. **Relay Outputs:** 4 relay outputs to send normally open (NO) or normally closed (NC) signal to external devices.
12. **RS485:** Connect to PTZ cameras or control keyboard to control through DVR system.
13. **Ethernet Port (RJ-45):** Connect to the network to allow remote connection over the network. Remote connection allows users to access live monitoring, searching and other available functions via the network.

3-5. Remote Controller

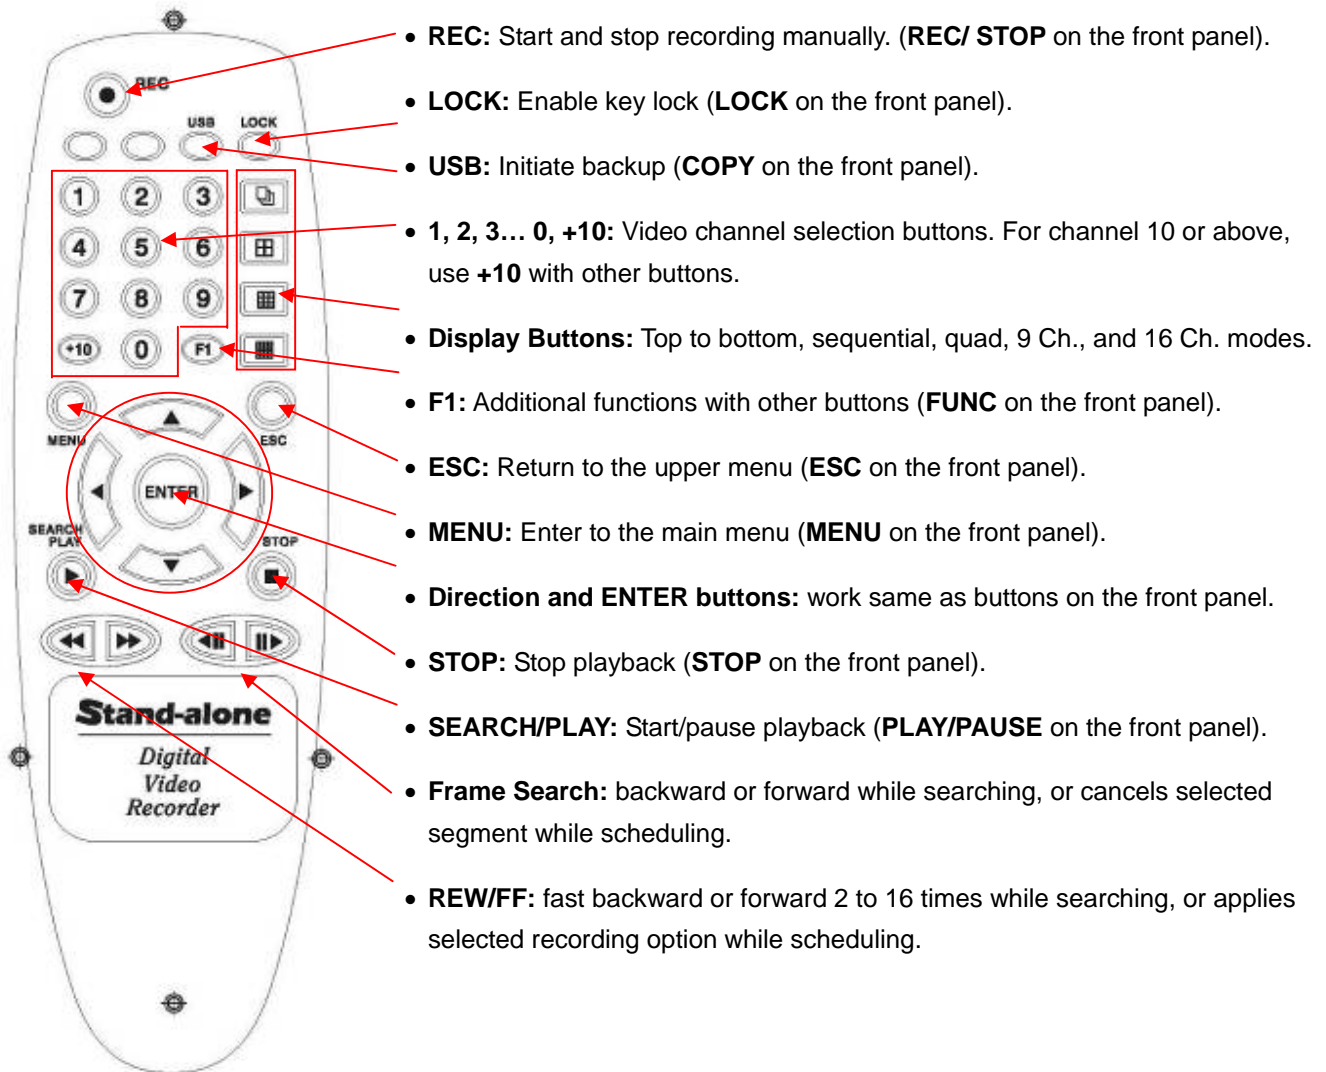

< Special Function using **F1** button >

1. “**F1**” + “**ENTER**”: Display system information (video format, HDD Info, IP address, version, etc.).
2. “**F1**” + “**ESC**”: Turn on/off displaying motion detected area (under motion or alarm recording only).
3. “**F1**” + “**MENU**”: Display audio channel selection for speaker output in live display mode or playback mode.
4. “**F1**” + **STOP**: VGA resolution change from VGA to XGA
5. “**F1**” + **COPY**: Display backup progressing bar when user go back to live mode (if backup is not finish)
6. “**F1**” + “**1, 2, 3... 0, +10**”: Select a Remote Controller ID. Once the ID is selected, only the DVR with corresponding Remote Controller ID will receive command. It is applicable only for DVR units that have **REMOTE ID** configured (refer to Chapter 4-3.System Setup).


4. Main Menu Programming



No.	Icon	Name	No.	Icon	Name	No.	Icon	Name
1		SYSTEM	2		DISPLAY	3		RECORD
4		EVENT	5		SCHEDULE	6		NETWORK
7		COPY	8		HARD DISK	9		CAMERA

4-1. Overview Main Menu

Before using **H.264 DVR** for the first time, it is necessary to initialize the system with information that need to be manually adjusted, such as time and date, password, display mode, recording mode, network configuration and so on. In order to access Main Menu, first press **MENU** button of front panel in DVR, or equivalent button on remote controller. If ADMIN LOCK is set to YES, which is the factory default, the user will be prompted for login as below:

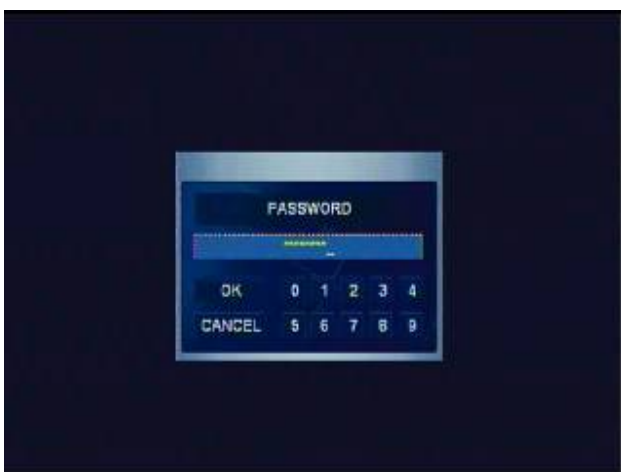


First, select a user, enter password using **1** through **10** Buttons (press **10** to enter "0"), and press **ENTER** button to log in. **ENTER** button is located in the middle of directional buttons. Factory default passwords for all users are "1".




Note: Under the menu, please use direction buttons to browse through options available: **Up** (**▲**), **Down** (**▼**), **Left** (**◀**), or **Right** (**▶**). Press **ENTER** Button, which is in the middle, to make a selection or get into the sub menu, if available. Press **ESC** to return to the previous menu after setting and to save the values of setup.

4-2. DVR Menu Tree

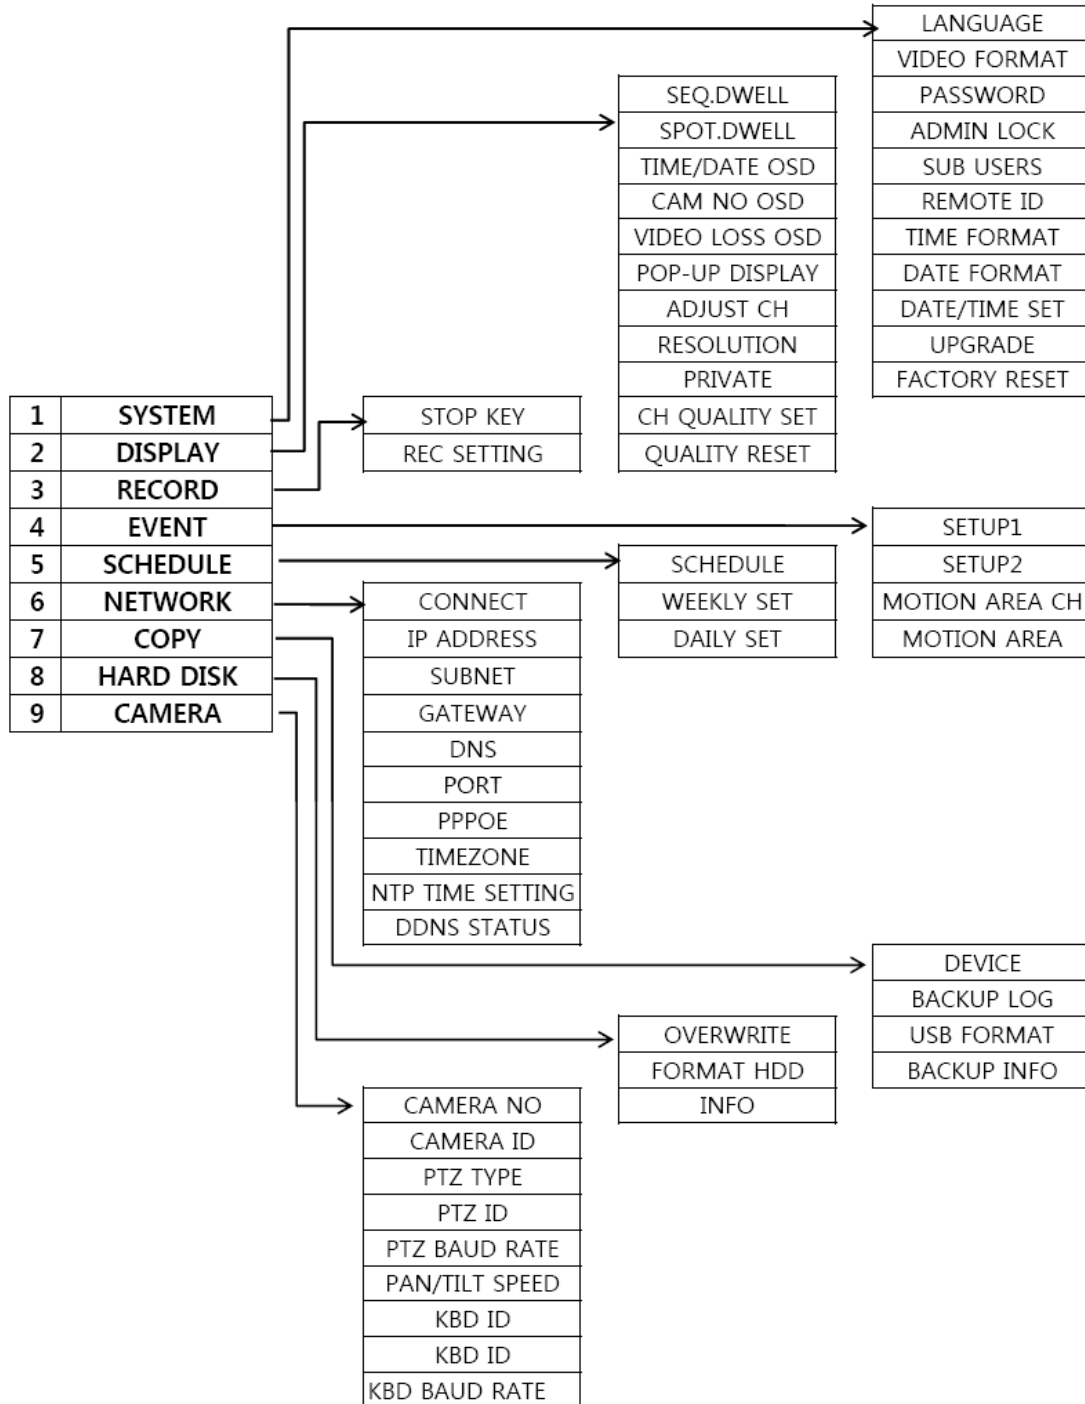


4-3. System Setup

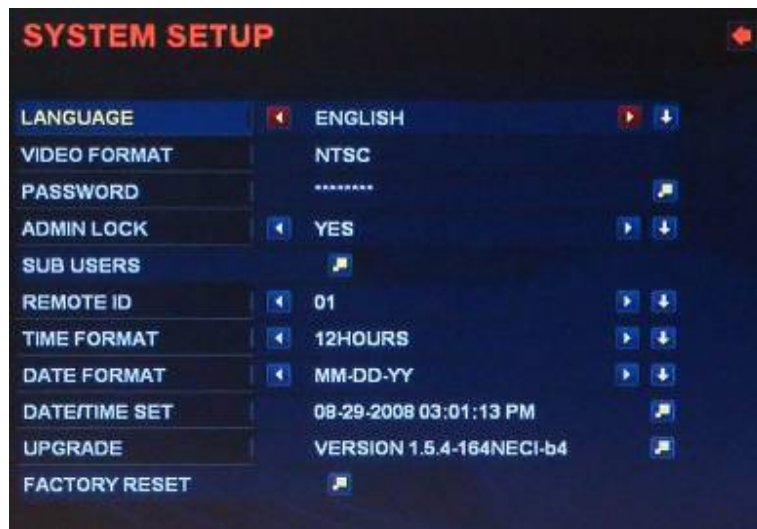

System Setup allows the user to set basic system configurations.

1. **LANGUAGE** Select the language to be used on the system. English, German, French, Korean, Turkish, Italian, Spanish, Portuguese, Polish, and Russian are available.
2. **VIDEO FORMAT** Display the type of video inputs, NTSC or PAL, which is automatically detected after power ON. For proper detection, it is strongly recommended to connect camera(s) while power is off.
3. **PASSWORD** Allow the user to change current password of the user that is currently logged in with. It will prompt to enter current, new, and confirm password. Password can be assigned up to 8 digits of numerical combination. Enter numbers using 1 through 10 Buttons (press 10 to enter "0"). Factory default passwords for all users are "11111111".
4. **ADMIN LOCK** Allow the user to select YES or NO. When YES, login will pop up to access main menu, search, and control PTZ. However, some setting, such as Sub Users cannot be adjusted if it is set to NO.
5. **SUB USERS** Allow the user to change sub users' name and authority (accessibility). There are 10 sub users available, and only ADMIN user can access this setting to configure sub users. In order to configure this, ADMIN LOCK option above must be set to YES. If it was just changed to YES, please completely exit from the menu and log in as ADMIN user to access. It is possible to configure each individual user, permission to access setup, perform search, control PTZ, remote in via network, and change private option.

- 6. **REMOTE ID** Allow DVR unit to have specific and unique ID for remote controller. If multiple DVR units are used within reachable distance, a signal sent from a remote control will be delivered to all units reachable, while the remote ID is set to OFF, factory default. The ID can be assigned from 01 to 16. After setting REMOTE ID, the user must select the proper unit by pressing **F1** + any of **1** through **16**. Once a unit selected, other units will display following icon on the left top corner of the screen: 
- 7. **TIME FORMAT** Select 24 HOURS (military time) or 12 HOURS (AM/PM). Whenever Time Format is changed, clock information on monitor and file information in search list will be updated together.
- 8. **DATE FORMAT** Select MM-DD-YY, DD-MM-YY, or YY-MM-DD format to display date.
- 9. **DATE/TIME SET** Allow user to change the date and time. Setting a date and time prior to existing images' date and time may cause corruption on recorded files. Therefore, it is recommended to set the date and time properly before start recording.
- 10. **UPGRADE** Display the firmware version. Press **ENTER** to update the firmware through USB memory driver. The firmware also can be updated over the network, using Client software. For more detail information, Please check Chapter 8. Firmware Update (Page 35).
- 11. **FACTORY RESET** Return to factory default setting value.

Note: When all of settings are finished and exiting from the main menu, the user will be prompted as shown below. Check box must be selected to apply all of changes made.



4-4. Display Setup



1. **SEQ.DWELL** Select dwell time between 1 to 60 seconds for the switching interval under sequential display mode. Press Left/Right Direction buttons to decrease/increase dwelling time.
2. **SPOT.DWELL** Select dwell time between 1 to 60 seconds for the switching interval on SPOT video output, which displays a single channel view of all connected video channels by sequentially switching. Press Left/Right Direction buttons to decrease/increase dwelling time.
3. **TIME/DATE OSD** Select ON to show the current time and date on the main display and OFF to hide. Note that this setting will not affect to the time and date of recorded images.
4. **CAM NO OSD** Select ON to show the camera number on the main display and OFF to hide.
5. **VIDEO LOSS OSD** Select ON to display “VIDEO LOSS” with blue screen for disconnected input(s). If set to OFF, disconnected channels will be displayed black.
6. **POP-UP DISPLAY** Select number for the period in second to allow pop-up display by event trigger, such as motion or alarm. Set to OFF to turn off pop-up display. If more than one channel needs to be popped-up at the same time, channels would be popped up by turn, interval of 3 seconds.
7. **ADJUST CH** Select a channel to apply PRIVATE and CH QUALITY SET.
8. **PRIVATE** Turn on or off private feature on the selected channel. The channel with private ON will display black screen.
9. **CH QUALITY SET** Adjust brightness, contrast, hue, and saturation on the selected channel. Once selected, each attributes can be adjusted between 1% and 99%.
10. **QUALITY RESET** Reset quality controls including brightness, contrast, hue, and saturation to the factory initial values.

4-5. Recording Setup



1. **STOP KEY** Select DISABLE or ENABLE for the **REC/STOP** button. In case of manual recording, manual recording can be started and stopped by the **REC/STOP** button. This STOP KEY protects the system from unauthorized interruption of recording. While it is set to DISABLE, recording can not be stopped by REC/STOP button.
2. **REC SETTING** Configure recording conditions as below:

CH	Resolution	Quality	FPS	REC	Audio	Lock
01	NORMAL	VERY HIGH	30	MANUAL	ON	OFF
02	NORMAL	VERY HIGH	30	MANUAL	ON	OFF
03	NORMAL	VERY HIGH	30	MANUAL	ON	OFF
04	NORMAL	HIGH	30	MANUAL	OFF	OFF
06	NORMAL	VERY HIGH	30	MANUAL	OFF	OFF
06	NORMAL	VERY HIGH	30	MANUAL	OFF	OFF
07	NORMAL	VERY HIGH	30	MANUAL	OFF	OFF
08	NORMAL	VERY HIGH	30	MANUAL	ON	OFF
09	NORMAL	VERY HIGH	30	MANUAL	ON	OFF
10	NORMAL	VERY HIGH	30	MANUAL	ON	OFF
11	NORMAL	VERY HIGH	30	MANUAL	ON	OFF
12	NORMAL	STANDARD	30	MANUAL	ON	OFF
13	NORMAL	STANDARD	30	MANUAL	ON	OFF
14	NORMAL	STANDARD	30	MANUAL	ON	OFF
16	NORMAL	STANDARD	30	MANUAL	ON	OFF
16	NORMAL	STANDARD	30	MANUAL	OFF	OFF

Resolution: Select from FULL (4 CIF, D1), HALF (2 CIF, Half D1), or NORMAL (CIF)

Quality: Select from VERY LOW, LOW, STANDARD, HIGH, and VERY HIGH

FPS: Select from a recording frame rate from 1 to 30 on NTSC (1 to 25 PAL).

REC: Select from MANUAL, SCHEDULE, EVENT, OFF for recording type.

Audio: Select ON or OFF for audio recording

Lock: Select ON or OFF to prevent overwriting for the specific channel. This lock overrules overwriting under

HDD setting. Therefore it must be used for a short period of time with caution. LOCK must be turned off to prevent recording interruption.

Note: Available FPS will be automatically adjusted according to video resolution setting.

Resolution (All 16 Ch.)	Available Recording Frame Rate	
	NTSC	PAL
CIF	Max. 480 Fps	Max. 400 Fps
2 CIF (Half D1)	Max. 240 Fps	Max. 200 Fps
4 CIF (Full D1)	Max. 120 Fps	Max. 100 Fps

* **CIF:** 320 x 240 in NTSC, 320x 288 in PAL

* **Quick Recording Setup:** All 16ch resolution can be set as same as the resolution with highlight bar, if “ Number 1 ” button is pressed after pressing “ FUNC (F1)”. **Quality, FPS, REC, Audio and Lock can be set as same way.**

4-6. Event Setup



1. SETUP 1

CH	Quality	FPS	EVENT	PRE	Duration
01	STANDARD	30	MOTION	OFF	1 MIN
02	STANDARD	30	ALARIM	OFF	1 MIN
03	STANDARD	30	MOTION	OFF	1 MIN
04	STANDARD	30	ALARIM	OFF	1 MIN
06	STANDARD	30	ALARIM	OFF	1 MIN
06	STANDARD	30	ALARIM	OFF	1 MIN
07	STANDARD	30	ALARIM	OFF	1 MIN
08	STANDARD	30	ALARIM	OFF	1 MIN
09	STANDARD	30	ALARIM	OFF	1 MIN
10	STANDARD	30	ALARIM	OFF	1 MIN
11	STANDARD	15	ALARIM	OFF	1 MIN
12	STANDARD	15	ALARIM	OFF	1 MIN
13	STANDARD	15	ALARIM	OFF	1 MIN
14	STANDARD	15	ALARIM	OFF	1 MIN
16	STANDARD	15	ALARIM	OFF	1 MIN
16	STANDARD	15	ALARIM	OFF	1 MIN

Quality: Select the recording picture quality from VERY LOW, LOW, STANDARD, HIGH, and VERY HIGH.

FPS: Select from a recording frame rate from 1 to 30 on NTSC (1 to 25 PAL).

EVENT: Select ALARM or MOTION.

PRE: Turn Pre-event recording ON or OFF. When it is set to ON, buffered images will be recorded before the motion event.

Duration: Assign recording time after the event triggered from 30 sec up to 60 min.

2. SETUP 2

CH	Sensitive	Sensor	Input	Output	Buzzer
01	NORMAL	N.O	01	1	OFF
02	NORMAL	N.O	02	1	OFF
03	NORMAL	N.O	03	1	OFF
04	NORMAL	N.O	04	1	OFF
06	NORMAL	N.O	06	2	OFF
06	NORMAL	N.O	06	2	OFF
07	NORMAL	N.O	07	2	OFF
08	NORMAL	N.O	08	2	OFF
09	NORMAL	N.O	09	3	OFF
10	NORMAL	N.O	10	3	OFF
11	NORMAL	N.O	11	3	OFF
12	NORMAL	N.O	12	3	OFF
13	NORMAL	N.O	13	4	OFF
14	NORMAL	N.O	14	4	OFF
16	NORMAL	N.O	16	4	OFF
16	NORMAL	N.O	16	4	OFF

Sensitivity: Select the level of sensitivity for motion detection from VERY LOW, LOW, STANDARD, HIGH, and VERY HIGH.

Sensor: Select sensor type between NO and NC.


Input: Select an input from 1 ~ 16.

Out: Select a relay output from 1 ~ 4.

Buzzer: Turn ON or OFF the audible warning upon event detection.

* **Quick EVENT Setup:** All 16ch Quality can be set as same as the resolution with highlight bar, if “ Number 1” button is pressed after pressing “ FUNC (F1)”. **FPS, EVENT, PRE and Duration can be set as same way.**

3. **MOTION AREA CH** Select a video channel to set motion area to selectively detect motion.
4. **MOTION AREA** Assign area to detect motion from 11 (H) x 10 (V) grid.

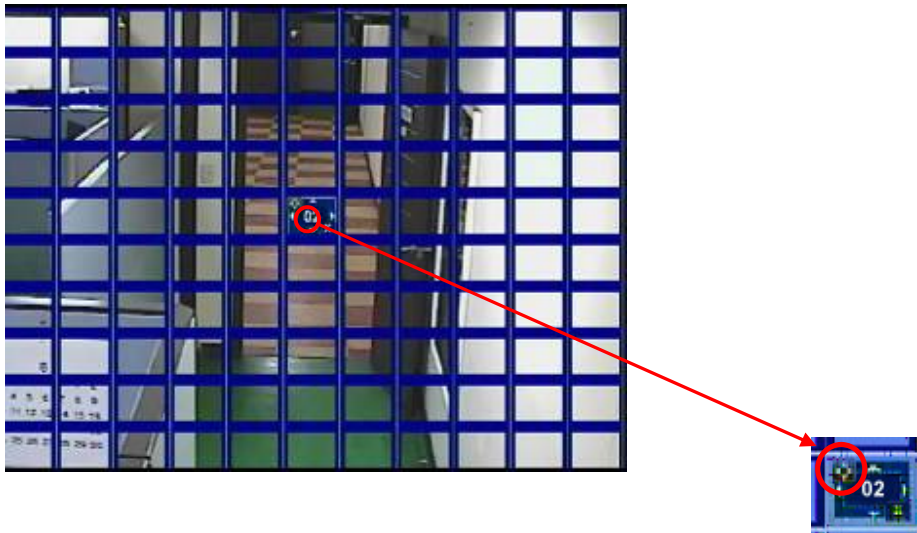

ENTER: Toggle among direction mark, add (+), and remove (-) on the circled area above. Once it is set to add (+) mark, a currently selected segment will be marked to detect motion. A segment will be deselected if it changes to remove (-) mark.

Direction Buttons: Move focus to the proper direction. While the focus is set to direction mark, the focus only moves to the direction that is pressed. If the focus is set to add (+) / remove (-) mark, the focus will move to the proper direction and a segment will be selected or deselected respectively.

◀ ▶ : Change the channel to set motion area from Ch. 1 to Ch. 16

ESC: Exit from motion area setting and returns to the event setup.

* **Quick Motion Area Setup:**

- All Motion Area setting: If “Number 1” button is pressed after pressing “FUNC (F1)”.
- All Motion Area releasing: If “Number 2” button is pressed after pressing “FUNC (F1)”.
- All Motion Area selection reversion: If “Number 3” button is pressed after pressing “FUNC (F1)”.

4-7. Schedule Setup



1. **SCHEDULE** Select WEEKLY or MONTHLY to enable scheduled recording. Select OFF to disable recording by schedule.

2. **WEEKLY SET** Allow the user to schedule by days of the week. Each hour segment can be set to MANUAL (●) or EVENT (👤). Press **ENTER** to switch between MANUAL and EVENT, and use direction buttons to browse on the table. Selected recording mode can be applied by ◀▶ buttons and canceled by ▶|| and ■ buttons.

While using remote controller, press ◀▶ to apply and ▶|| to cancel.



3. **MONTHLY SET** Allow the user to schedule by days of a month (01 through 31). Each hour segment can be set to MANUAL or EVENT, and setting controls are same as WEEKLY SET above.

* Quick SCHEDULE Setup:

- First select MANUAL or EVENT, then


1) All setting: If “Number 1” button is pressed after pressing “FUNC (F1)”.

2) All setting releasing: If “Number 2” button is pressed after pressing “FUNC (F1)”.

3) All setting reversion: If “Number 3” button is pressed after pressing “FUNC (F1)”.



4-8. Network Setup

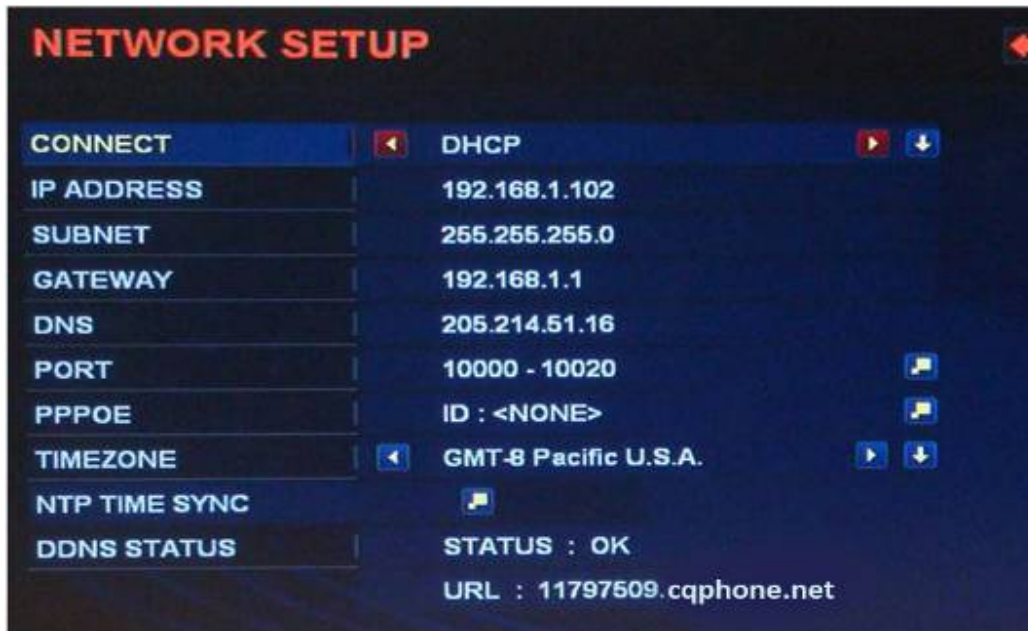

1. **CONNECT** Select a connection method among STATIC, DHCP, or PPPOE.
2. **IP ADDRESS / SUBNET / GATEWAY / DNS** Accessible only if CONNECT is set to STATIC. While accessible, information can be changed to fit in the network environment. Proper information must be provided from the network administrator or service provider. Otherwise, IP ADDRESS / SUBNET / GATEWAY / DNS will be automatically assigned.
3. **PORT** Select a TCP port number to use for the system. This port number should be provided to users to make remote connection. Once a port number is assigned, DVR system would acquire next 20 consecutive ports too. Therefore, if TCP port 10000 (at default) is selected, the DVR system will use TCP ports range of 10000 to 10020 and these ports should be opened and forwarded to the DVR system. For the configuration of network devices, please contact the network administrator or service provider
4. **PPPOE** Display PPPoE ID if available. Only accessible and required if CONNECT is set to PPPoE. Once selected and **ENTER** is pressed, it will prompt to enter proper ID and password.
5. **TIME ZONE** Select a proper location from the list. The list is in increasing order by GMT. There might be multiple choices available under same GMT. In such case, please make a most preferred place per location.
6. **NTP TIME SYNC** Select ON or OFF for time synchronization. The system synchronizes standard time with time server, using Network Time Protocol (NTP). Note that DNS server must be set properly for this function.
7. **DDNS STATUS** Display Dynamic DNS status and address of it. STATUS will display OK while normally connected, NONE if DDNS is not used, and ERR if DDNS IP update failure.

4-9. Copy Setup



1. **DEVICE** Select a device to make a copy from 'USB Storage' for USB memory device or 'CD/DVD' for optical drive.
2. **BACKUP LOG** Copy log data file to the USB device. It is only available while DEVICE is set to USB Storage. Log information includes DVR power ON/OFF, recording time, and event time. If there is no BACKUP media, "No BACKUP media!" message will be displayed. Once the log file is created, the file can be reviewed from notepad or any other text editors.
3. **CD/DVD RW FORMAT** Execute media format. Before make a copy of recorded files, it is recommended to format the media if it is rewritable and not empty. The built-in optical drive will support most CD-R, CD R/W, and DVD+R/W.
4. **BACKUP INFO** Display media and connected device information.

Note: Backup File Player will be automatically copied with copied data files. The application is simple version of File Player. For the usage of Backup File Player, please refer to the description of File_Player on the software manual. For actual Copy (Backup) procedure, please refer to chapter 6-5. Backup (page 34).

4-10. Hard Disk Setup



1. **OVERWRITE** Turn ON or OFF the overwrite feature. It will recycle the HDD by overwriting oldest files by its maturity. First recorded area in HDD can be replaced with new recording data.
2. **FORMAT HDD** Execute formatting HDD. Once the formatting is done, "Format Complete" message will be displayed.
3. **RAID** : To use HDD efficiently, this DVR provide RAID functions. RAID 0 (Extended HDD) and RAID 1 (Mirrored HDD – to make up backup HDD from one of HDD – if you set up two HDD in DVR)

RAID 0 (Extended more than two HDD in DVR)

- Maximized 2 TB extended (1 TB+ 1 TB or 500MB + 500MB + 500MB + 500MB)

RAID 1 (Mirrored HDD between 2 HDD)

- Maximized 2 TB Mirrored (1 TB+ 1 TB or 2 TB + 2 TB)


4. **Apply RAID** : after select RAID function, the system need to format HDD (RAID format HDD), therefore you should push the "Apply Raid" then RAID function will be started.

**** Even if RAID functions will be executed, you also push the REC button, then you can record video data with RAID functions**



5. **INFO** Display installed HDD information, including a number of HDD installed, total HDD capacity mounted, and available space on it.

4-11. Camera Setup

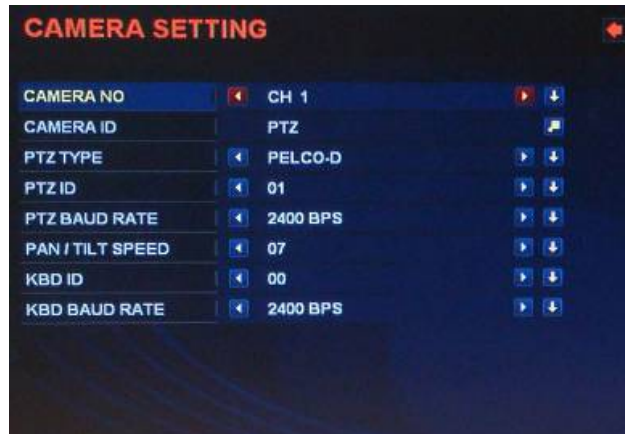

1. **CAMERA NO:** Select a camera to adjust ID or PTZ settings below.
2. **CAMERA ID:** Change Camera ID to be displayed for the selected channel. Once selected, On-Screen Keyboard will be available.
3. **PTZ TYPE:** Select a type of PTZ protocol if applicable. In order to control PTZ cameras from the DVR system and remote, it is necessary to properly set this section. **H.264 DVR** supports following protocols: DiViS-D, Panasonic, Pelco-D, Pelco-P, Techwin, Niko, DRX502A (DSC230s), KRE 302 (301), GC755NP, TOA (CC) 554, RAS716(LS), LPF100, KD, INTR-M, LILIN MLP2 and so on.
4. **PTZ ID:** Configure the camera ID between 0 and 255. This ID needs to match with the physical ID set on the camera, mostly by dip switches.
5. **PTZ BAUD RATE:** Baud rate for the camera connected. Ranges from 2400 to 19200 BPS and needs to match with the actual camera setting.
6. **PAN/TILT SPEED:** set pan/tilt speed between 0 and 10, higher number for faster movement.
7. **KBD ID:** Configure the keyboard ID between 0 and 16. This ID needs to match with the physical ID set on the keyboard.
8. **KBD BAUD RATE:** Baud rate for the keyboard connected. Ranges from 2400 to 19200 BPS and needs to match with the actual keyboard setting.

5. Live Display & Recording

H.264 DVR supports full picture, quad picture, 9 picture and 16 picture view along with sequential switching mode. Also it supports event popup if motion or alarm event is configured.

5-1. Live Picture Display Mode

1. Full Picture



Display a selected video channel in full screen mode.

The video channel can be selected by channel selection buttons on the front panel or by remote controller. On remote controller, Ch. 10 ~ 16, the **10+** button may be used for the tenth digit. For example, press **10+** and then press **5** to select Ch.15.

2. Quad Picture



Display 4 video channels at a time, starting from Ch. 1 ~ 4. By pressing the quad button repeatedly, the display will rotate from Ch. 5 ~ 8 to Ch. 9 ~ 12, Ch. 13 ~ 16, and then back to Ch. 1 ~ 4 so on and so forth.

3. 9 Picture Display



Display 9 video channels at a time, starting from Ch. 1 ~ 9. By pressing this button repeatedly, the display will toggle between Ch.1 ~ 9 and Ch.8 ~ 16.

4. 16 Picture Display



Display all 16 video channels in a 4 by 4 format.

*** Mouse operation for live (Playback) display pictures**

- Left button of mouse: From (to) 4/9/16 pictures mode to (from) single channel.
- Right button of mouse: Sequentially movement from single channel to 4/9/16 pictures.

5. Sequential Picture Display Mode Sequentially display all available video channels based on the display mode. For example, if SEQ button is pressed under the full picture mode, display will automatically switches from Ch. 1 through Ch.16.

5. Live audio selection for speaker output











H.264 DVR allows recording audio per each channel of video inputs, and audio outputs are available for only one selected channel at a time. In order to select an audio channel for audio output, press **FUNC** (ALT) and then **MENU** on the front panel (F1 and then **MENU** on the remote controller). It will allow the user to select an audio channel between 0 and 16 or Mute to turn off the audio.

5-2. OSD (On Screen Display) on Live Mode










1. **Time information** is displayed on top-center of the screen.
2. **Camera ID** is displayed on the bottom-left of each channel.
3. **Recording status** is displayed on the bottom-center of each channel.
4. **Video Loss** is displayed on the center of each channel.

5. Other Icons

Function	Symbol	Details
Recording	 or 	Displayed on the middle bottom of each channel and indicates Manual or Motion/Alarm recording
Key Lock		Displayed on the top-left when the key lock is turned on.
Network		Displayed on the top-left when there is a connection made remotely.
PTZ		Displayed on the top-left under PTZ control mode.
BACKUP	 or 	Displayed on the top-left while processing backup on CD/DVD or USB.
REMOTE ID		Displayed on the top-left if other ID is selected on the remote.

5-3. PTZ Control

Prior to control PTZ function of camera(s), proper camera and setting must be done.

1. Select a camera to control PTZ using **Channel Selection buttons**.
2. Press **PTZ** or **ENTER** button on the front panel to enter PTZ control mode (press **ENTER** on the remote controller). Depending on the security setting, the user might be prompted for password verification. Note that PTZ control can be limited by user authority. PTZ mode icon () will be displayed on the top-left corner of the screen.
3. **PAN/TILT** Press direction buttons to move cameras to respective directions.
4. **ZOOM** Press **FF** or **REW** ( ) on the front panel to zoom in or out (press  on the remote controller).
5. **FOCUS** Press **PLAY/PAUSE** or **STOP** ( ) on the front panel to adjust focus (press  on the remote controller).
6. To exit from PTZ control mode, press **ENTER**. The PTZ mode icon will be disappeared.

5-4. Recording Options

H.264 DVR is capable to record 16 channels of video and audio simultaneously, real-time (30 FPS) for each channel. Also each channel can be independently configured for its resolution, recording quality, frame rate, audio recording and so on. Also recording mode can be selected individually.

Recording can be initiated by manually, by triggered event of motion detection or alarm input, or by weekly or daily schedule created by user.



Recording Mode	Description
Manual	While recording mode is set to manual, recording starts or stops by REC/STOP button on the front panel or REC button on the remote controller. Note that Manual recording enabled by schedule cannot be turned off by REC/STOP or REC button
Event	While recording mode is set to event, recording is triggered by event assigned for each channel from event setting.
Schedule (Weekly)	While recording mode is set to schedule, recording automatically starts or stops following the pre-scheduled plan. For weekdays, Monday through Friday can be scheduled by 24 hours per day, and each segment (unit of an hour) can be set not to record, manual or event.
Schedule (Daily)	From the first day of the month to the last day, each days schedule can be planned and executed.

6. Search and Backup




6-1. Search List

In order to search or backup recorded data, you need to press “*search*” button on front panel or remote controller.

1. **Option:** Select type of recording to display on the calendar among MANUAL, EVENT, SCHEDULE, and ALL.
2. **DATE:** Allow the user to select date to search recorded data.
3.  : Allow to access specific time to search. This button is accessible with USB mouse only, if available. The feature is accessible by pressing **MENU** () button on the front panel or remote controller.
4. **Calendar:** Display days with available data based on OPTION selected. The calendar displays the month that corresponds to the selected DATE.
5. **EXIT:** Return to the monitoring screen by exit button on the front panel or remote controller.


6-2. Search by Recording Type

From search list, after selecting desired option and date to search, press **ENTER**. Then the Calendar can be browsed by direction buttons. Make a change on date selection if desired, and press **ENTER** again. The following screen displays:

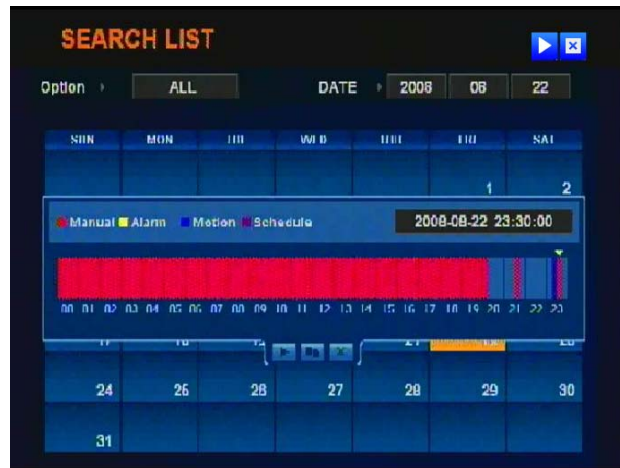

From the 24 hour time bar, select a desired segment to search. Recorded data are blocked in 15 minutes. Once segment is selected, press **ENTER** to playback. Refer to **6-4.Playback** for detail instruction on playback.

6-3. Search by Time & Date

From Search List, press **MENU** () button to search a specific date and time. The following screen will be displayed:



The user is able to select specific date and time to start playback. Once the date and time are selected, press **ENTER** to playback from that moment. Refer to **6-4.Playback** for detail instruction on playback.

6-4. Playback

While your DVR is in playback mode, any video channel and display mode can be selected by channel selection buttons and display mode buttons.




< Playback single CH >







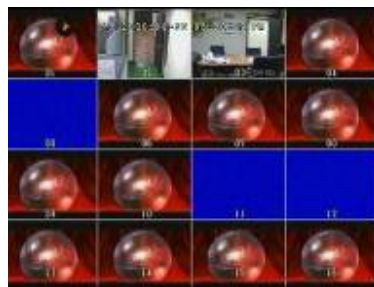


< Playback 4 CH >



< Playback 9 CH >





< Playback 16 CH >

1. **Play & Pause:** Press **PLAY/PAUSE** () button from the front panel to play and pause. On the remote controller, press **Search/PLAY** () to start play and **Frame Search buttons** () to pause.
2. **Fast Forward and Rewind:** Playback speed can be controlled for x2, x4, x8 and x16 both forward and backward. Press **REW** or **FF** ( ) on the front panel and  on the remote controller.
3. **Frame Search:** Once playback is paused, the user can move frame by frame using **LEFT** and **RIGHT** direction buttons on the front panel or **Frame Search buttons** () on the remote controller.
4. **Jog and Shuttle:** It is convenient controller to control playback speed easily. Works same as fast forward and rewind explained above.
5. **Live audio selection for speaker output**




H.264 DVR allows the user to retrieve video and audio simultaneously.


Similar to audio selection under live display mode, press **FUNC** () and then **MENU** () on the front panel (**F1** and then **MENU** on the remote controller). It will allow the user select an audio channel between 0 and 16 or Mute to turn off the audio while playing back.

6-5. Backup

From search list, select desired option and date to search, and press **ENTER**. Then the Calendar can be browsed by direction buttons. Make a change on date selection if desired, and press **ENTER** again. The following screen displays:

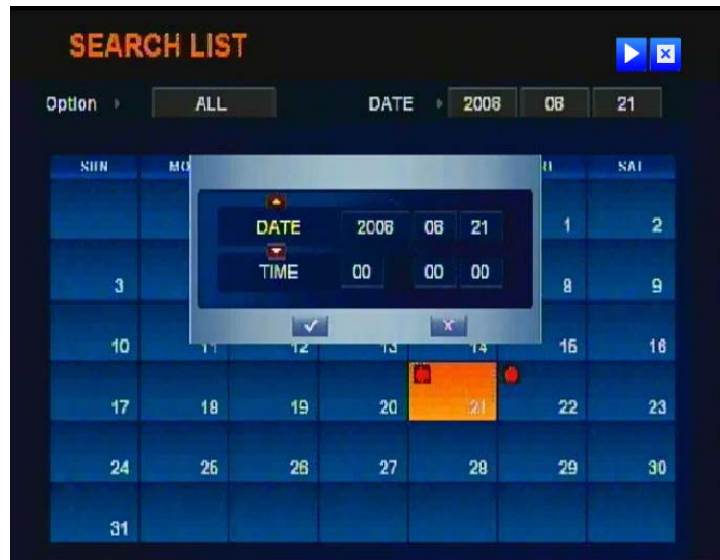

From the above screen, press **COPY** on the Front Panel and **USB** button on the remote controller. “START” and “END” will be prompted to set date and time to backup, in order of year, month, day, hour, minute and second. Set desired time range, move to the check mark, and press **ENTER**.

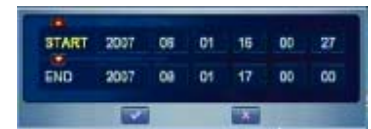

Note: On H.264 DVR series, recorded data is managed in the unit of each hour. Copy start time and end time should be within same hour frame. For example, if 9:50 AM ~10:05 AM needs to be backed up, the user must perform copy twice: once for 9:50:00 AM ~ 9:59:59 AM, and then 10:00:00 AM ~ 10:05:00 AM.

Finally, the user will be prompted with the menu below, which displays free space of currently selected backup device, size of selected data to copy, and available data per each channel.

Icons next to each channels indicates available video and audio data for the channel.

Choose channels to backup, and make sure SELECT size does not exceed FREE size.

Move to the check mark and press **ENTER** to finalize backup.

Note: Backup File Player will be automatically copied to the CD with files. Files can be reviewed by Backup File Player, and File_Player is also able to playback those files; however, File_Player will create index on those copied files to playback. Please refer to the description of File_Player on the software manual.

7. USB Mouse Operation


H.264 DVR supports USB Mouse to control the unit along with the front panel buttons and the remote controller. For the convenience, connect a USB mouse (which is not included) to the port available on the front panel. All icons under main menu are accessible with mouse.

7-1. Mouse Operation on Live Display

On the Live Display, locate the cursor to any of red circled area and left click to bring up the menu bar



1. Press this icon to open Main Menu, same as **MENU** on the front panel.
2. Press this icon to select an active audio channel, same as **FUNC** + **MENU** on the front panel.
3. Press this icon to enable the system lock, same as **LOCK** on the front panel.
4. Press this icon to start manual recording, same as **REC/STOP** on the front panel.
5. Press this icon to enter PTZ Control mode, similar to **PTZ** on the front panel. PTZ control with USB mouse allows the user to operate the preset feature of PTZ camera, in addition to the basic operation (the feature needs to be supported by the camera).

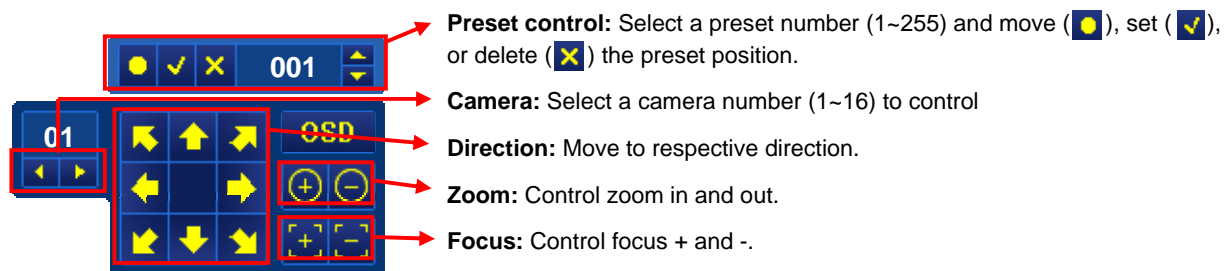














6. Press this icon to enter search mode, same as **SEARCH** on the front panel.
7. Press this button to close this icon set for mouse operation.

7-2. Mouse Operation on Search

While playing back recorded data, mouse operation is also available to control playback. Click on any of red circled area to show icons under playback mode.



1.  Press this icon to select an audio channel to playback, same as **FUNC**  + **MENU**  on the front panel.
2.   Press this icon to toggle between play and pause, same as **PLAY.PAUSE**  on the front panel.
3.  Press this icon to stop playback and back to search screen, same as **STOP**  on the front panel.
4.   Press these icons to control playback direction and speed (-16 ~ 16), same as **REW**  and **FF**  on the front panel.
5.  Press this button to close this icon set for mouse operation.

8. Firmware Update

Important Note: It is strongly recommended to update the firmware by a professional, only if it is determined necessary. Please make sure to review the whole procedure before start. Do not power off the system or remove USB memory drive while the update is proceeding. Update normally takes 10 to 15 minutes.

1. Copy the new firmware file, such as “dvr535352xx.tgz”, into a USB Memory Drive.
 (“xx” from firmware files means by number of channel for DVR what you purchased)
 (Example: 16 channel DVR’s firmware file → “dvr53535216.tgz”)
2. Insert the USB Memory Drive into a USB port on the front panel.
3. Enter Main Menu, and select **UPGRADE** under System Setup (refer to the Chapter 4-3. System Setup). The following message will be prompted. Select check mark and press **ENTER**.



4. While update is in progress, “Please wait” will be displayed, and when it is done, the system will be automatically reboot to complete update.




5. After the system is rebooted, please check on the setting to make sure the version information is changed to the new version.

Appendix 1. H.264 DVR Specification

Description		Specification
Video	Input	4/8/16CH, composite Video, BNC
	Output	1 Ch. Monitor / 1 Ch. Spot / 4/8/16 Ch. Loop-through / 1 S-Video / 1 VGA Output (Max. 1024x768) / HDMI
Audio	Input/Output	16 Ch. Input / 1 Ch. Output
Resolution	Display	Full (Single), Quad, 9 View, 16 View, and Sequential Mode
	Recording	NTSC: 720x480, 720x240, 320x240, PAL: 720x576, 720x288, 360x288
Compression	Algorithm	H.264 for video, G.723 for audio
Operation	OS	Embedded Linux
	Pentaplex	Recording, Playback, Monitoring, Backup & Network at the same time
	System control	Button, Remote Controller, Mouse
Frame rate	Recording (FPS)	Each 16CH video and audio real time recording.
		Recording Speed: 480(352x240), 120(720x480) in NTSC 400(352x288), 100(720x576) in PAL
		Recording mode (Frames/sec): 30 to 1 FPS for each channel
Recording	Recording mode	Continuous, Scheduled, Motion , Alarm Recording
	Alarm	Selectable recording CH & pre-recording
	(Event, Motion)	Duration: 30sec, 1, 2, 3, 4, 5, 6, 7, 8, 9, 10, 20, 30, 40, 50 min
	Alarm In/ Relay Out	4/8/16 (NO or NC) Alarm Inputs / 4 (NO or NC) Relay Outputs
Playback		Normal: x1 speed
		Fast Forward: x2,x4,x8,x16 (NTSC, PAL)
		Fast Backward: x2,x4,x8,x16 (NTSC, PAL)
		Playback speed: 480(NTSC) / 400(PAL) FPS
		Search list sorting support: All, alarm, motion, schedule and time.
HDD	Management	3 or 4 pcs of Serial ATA HDD (3.5 inch) (One is for CD/DVD RW)
Network	Protocol	10/100 Base-T TCP/IP, UDP, HTTP, SMTP, NTP, DHCP, DDNS
	Network Function	Easy GUI, Live Monitoring, Remote Configuration, PTZ control, Backup and Playback
		Web (IE) viewer, Event Notification, Multi-user accessing, Two way audio support. CMS software
	Time Setting	Network Time Protocol Support
PTZ	Pan/Tilt/Zoom	RS485
Archiving	Copy	CD/DVD and USB 2.0 for data backup
	USB 2.0	Firmware Upgrade via USB, System log file (USB Memory drive, USB HDD) backup.
F/W upgrade	Network/ USB2.0	Firmware Upgrade via USB, network
Electrical	Power Supply	AC to DC Adapter, 12V, 5.8A


Appendix 2. Pin Description of Connectors

1. USB Pin Descriptions (Front panel)

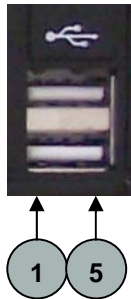


Pin NO.	Pin description
1	VCC
2	D- (TX-)
3	D+ (TX+)
4	GND
5	SHIELD

2. VGA Pin Descriptions

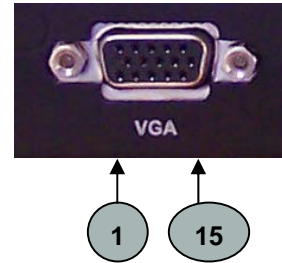


Pin NO.	Pin description
1	R
2	G
3	B
4	Not Used
5	Not Used
6	SYNC
7	Not Used
15	Not Used

3. RS232 Pin Descriptions (Reserved for future use)


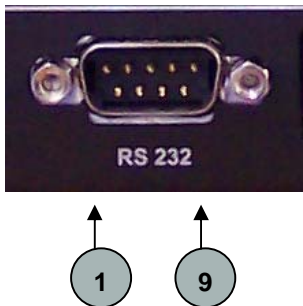


4. HDMI Pin Description

Cross Section of HDMI Connector

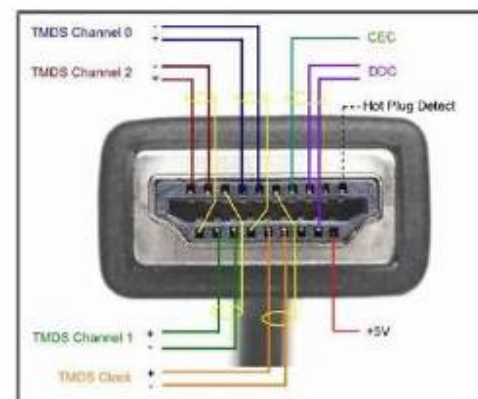

5. Alarm Inputs & Relay Outputs Pin Descriptions

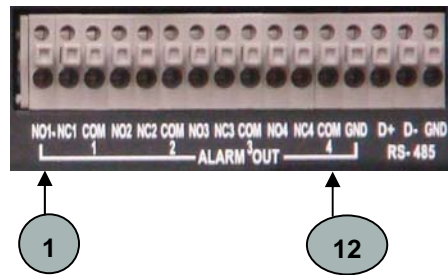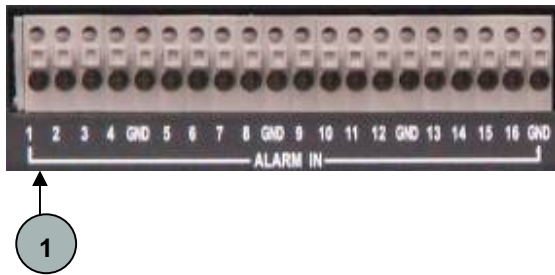



< Alarm Inputs Pin >

Pin NO.	Pin description
1	Sensor input 01
2	Sensor input 02
3	Sensor input 03
4	Sensor input 04
5	GND (Common)
6	Sensor input 05
7	Sensor input 06
8	Sensor input 07
9	Sensor input 08
10	GND (Common)
11	Sensor input 09
12	Sensor input 10
13	Sensor input 11
14	Sensor input 12
15	GND (Common)
16	Sensor input 13
17	Sensor input 14
18	Sensor input 15
19	Sensor input 16
20	GND (Common)


< Relay Outputs Pin >

Pin NO.	Pin description
1	Relay output NO1
2	Relay output NC1
3	GND (Common)
4	Relay output NO2
5	Relay output NC2
6	GND (Common)
7	Relay output NO3
8	Relay output NC3
9	GND (Common)
10	Relay output NO4
11	Relay output NC4
12	GND (Common)

5. RS485 Pin Descriptions

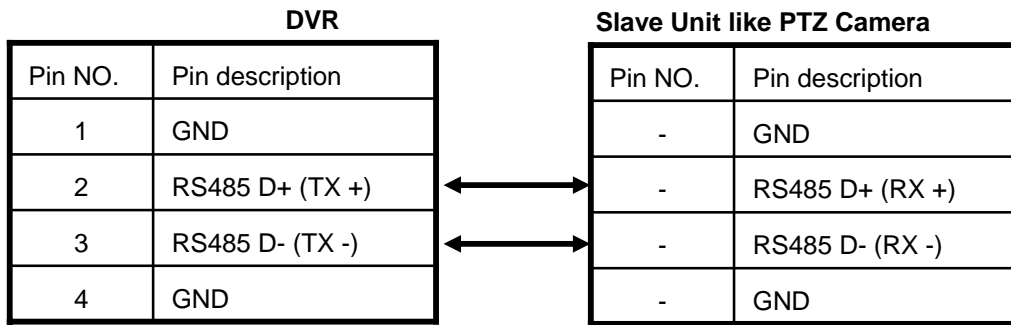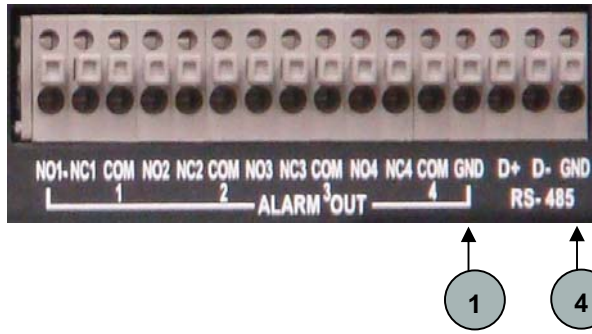

6. LAN port (RJ-45) Pin Descriptions

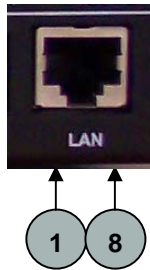

Pin NO.	Pin description
1	TXD+
2	TXD-
3	RXD+
4	Not Used
5	Not Used
6	RXD-
7	Not Used
8	Not Used