




02 - 18

Hide Camera behind Unit Number





30/11/2007 21:57

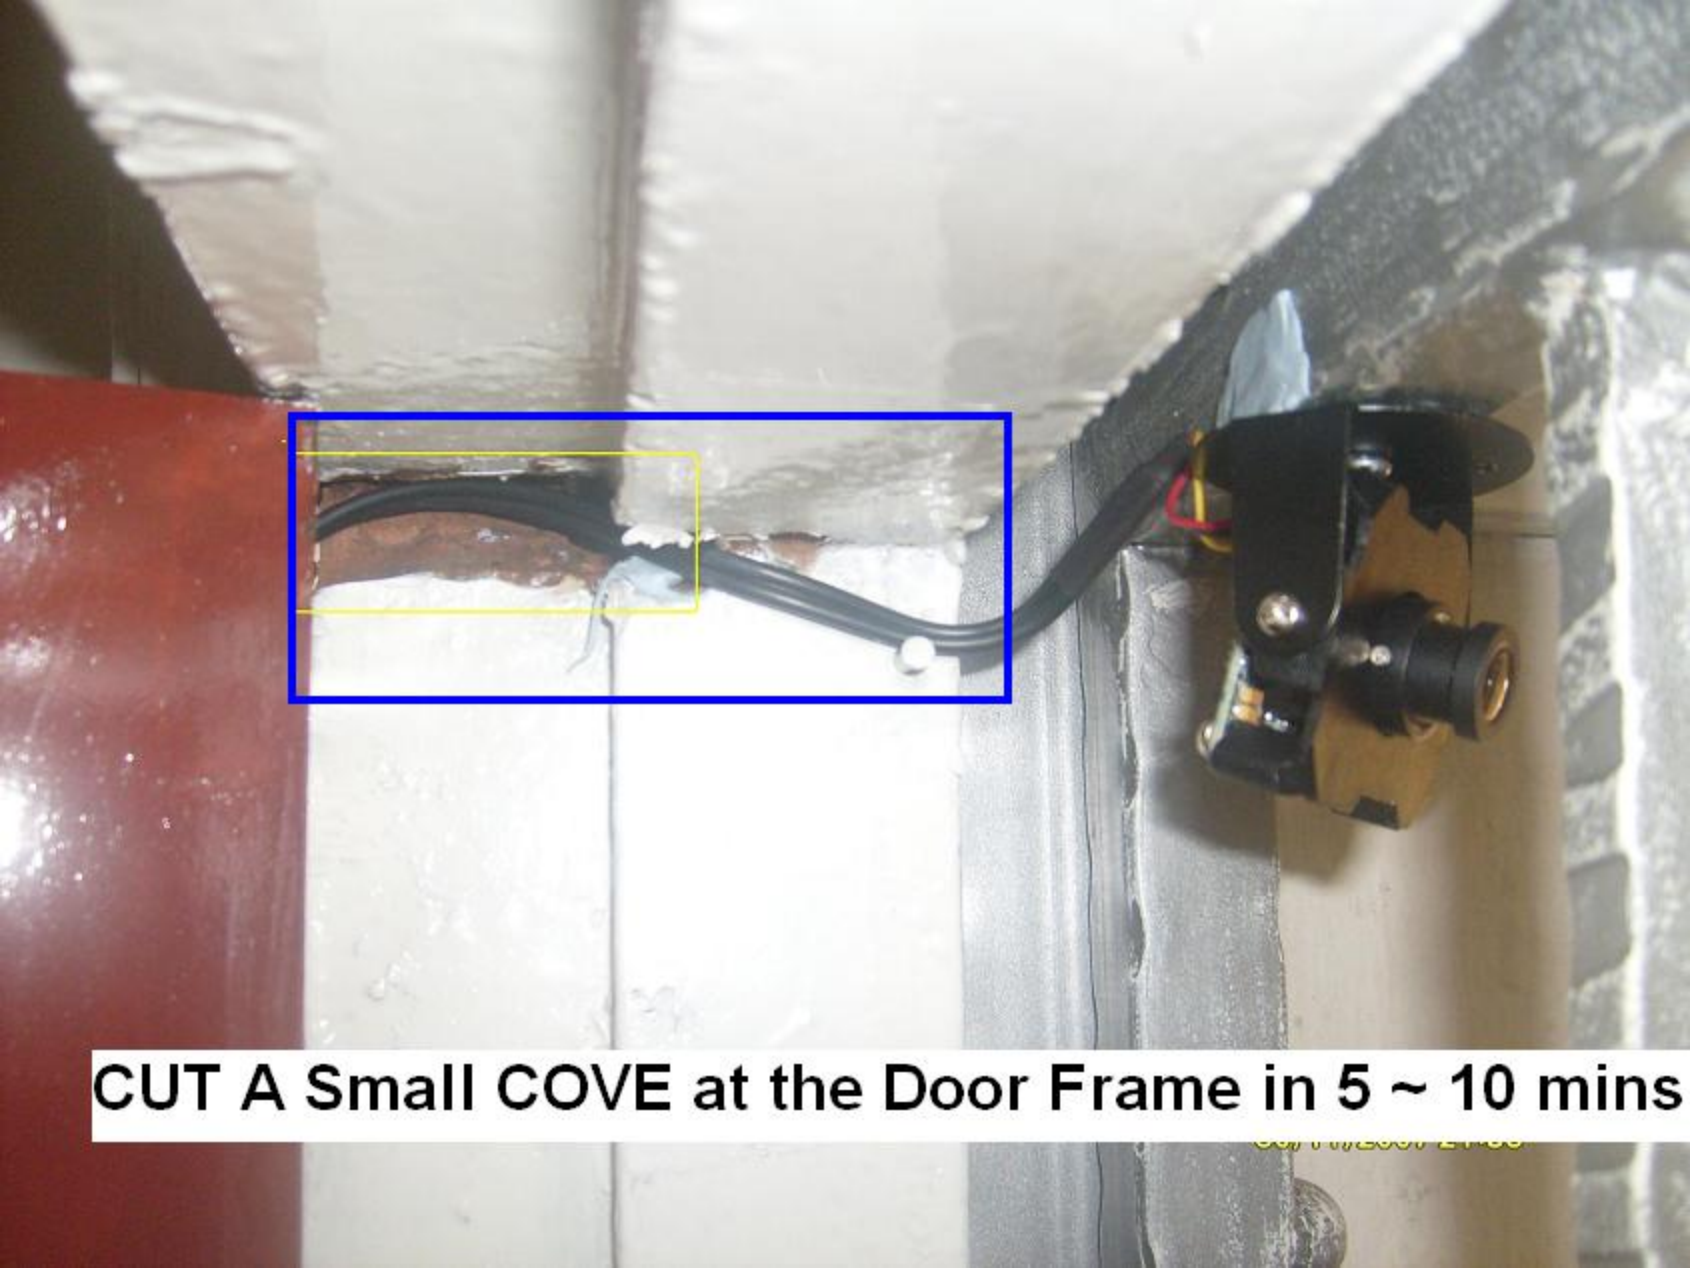

CUT A Small COVE at the Door Frame in 5 ~ 10 mins



**Video & DC cable out from Behind Door Frame,
use casing to cover up nicely.**

30/11/2007 22:04